


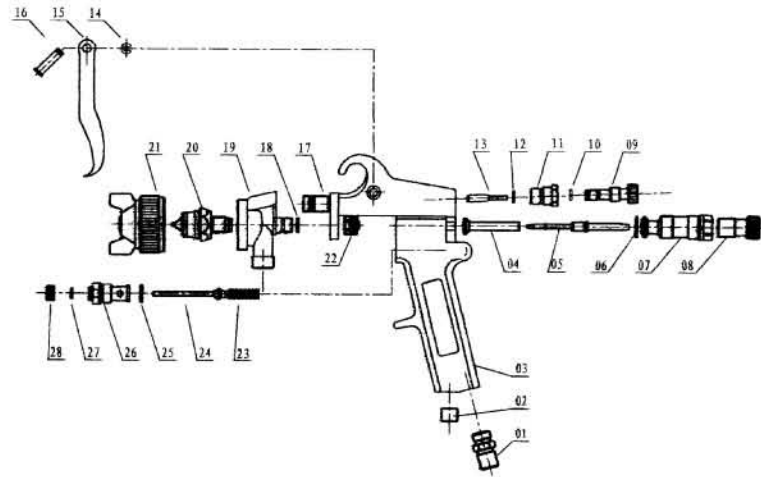

Parts list

No	Description	No	Description
1	Air Inlet Plug	15	Trigger
2	Block	16	Trigger Pin
3	Gun Body	17	Connect Screw
4	Direction Pipe	18	Washer
5	Fluid Adj. Needle	19	Head
6	Washer	20	Fluid Nozzle
7	Fluid Control Screw	21	Air Cap
8	Fluid Adj. Screw	22	Direction Screw
9	Pattern Adj. Screw	23	Switch Spring
10	O-ring	24	Switch Pipe
11	Pattern Adj. Knob	25	Sealing Washer
12	Snap Retainer	26	Switch Seat
13	Pattern Adj. Needle	27	Washer
14	Snap Retainer	28	Nut
		29	Fluid Inlet Plug

Liste des pièces

1	Bouchon pour orifice d'entrée d'air	16	Vis de la gâchette
2	Vis de joint	17	Vis
3	Corps	18	Rondelle
4	Boîtier	19	Tête
5	Aiguille de réglage la liquide	20	Gicleur pour liquide
6	Rondelle	21	Capuchon
7	Vis	22	Vis
8	Bouton de réglage la liquide	23	Ressort
9	Vis	24	Souape
10	Joint torique	25	Joint
11	Bouton de réglage la jet	26	Corse de la gâchette
12	Anneau élastique	27	Rondelle
13	Aiguille de réglage la jet	28	Ecrin
14	Anneau élastique	29	Bouchon pour orifice d'entrée d'eau
15	Levier de la gâchette		

