

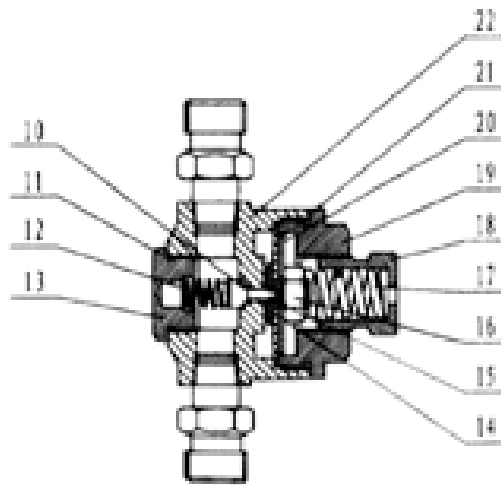


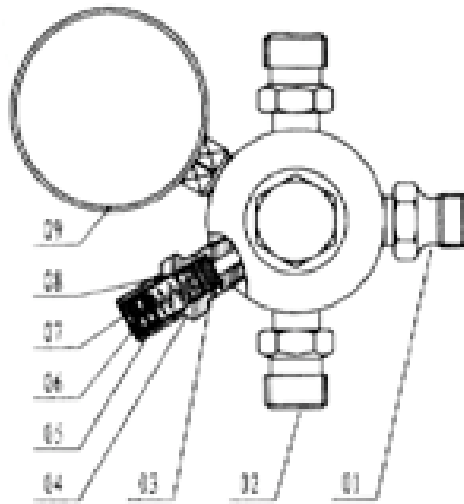



Parts List A – Regulator Assembly

01	Support	12	Spring
02	Air connection (2)	13	Rear cap
03	Latex mat	14	Bolt
04	Valve body	15	O-ring
05	O-ring	16	Nut
06	Screw	17	Spring
07	Spring	18	Adjusting cap
08	Spring plug	19	Front cap
09	Air gauge	20	Washer
10	Adjusting valve	21	Rubber washer
11	O-ring	22	Regulator body

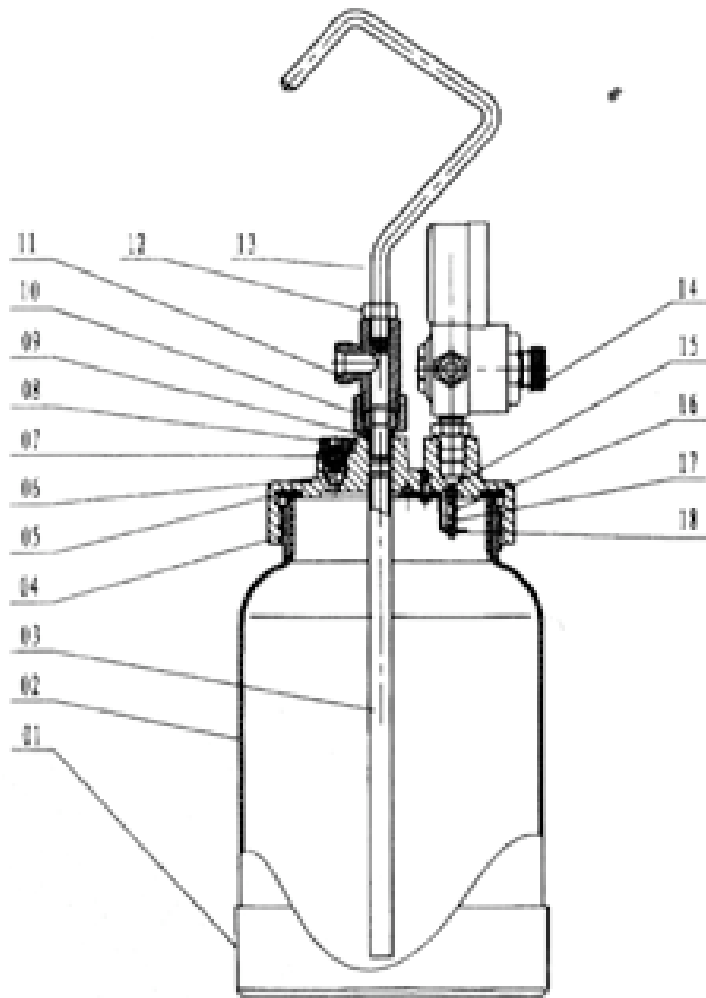


Parts List B – Canister Assembly

01	Bottom	10	Centrepost
02	canister	11	Fluid outlet
03	Fluid tube	12	Nut
04	cover	13	Handle
05	Rubber washer	14	Regulator assembly
06	Latex gasket	15	Screw
07	Spring	16	Check valve
08	Relief valve	17	Spring
09	Paint inlet plug	18	Washer

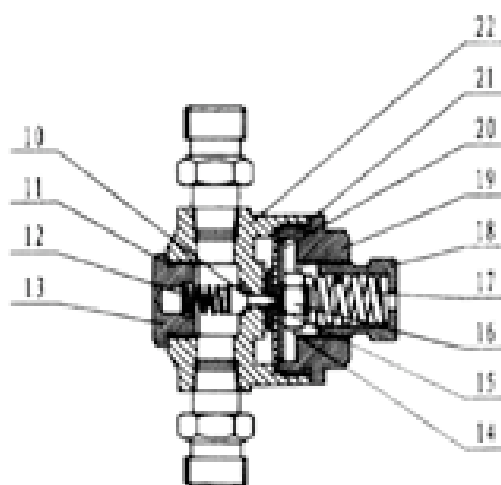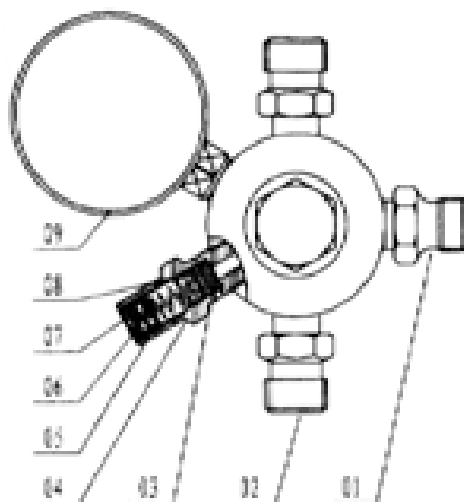

Liste de pièces A — Régulateur complet

01	Support	12	Ressort
02	Raccord pour l'air (2)	13	Capuchon arrière
03	Mat en latex	14	Boulon
04	Corps de soupape	15	Joint torique
05	Joint torique	16	Écrou
06	Vis	17	Ressort
07	Ressort	18	Chapeau de réglage
08	Bouchon à ressort	19	Capuchon avant
09	Manomètre à air	20	Rondelle
10	Clapet de réglage	21	Rondelle en caoutchouc
11	Joint torique	22	Corps du régulateur

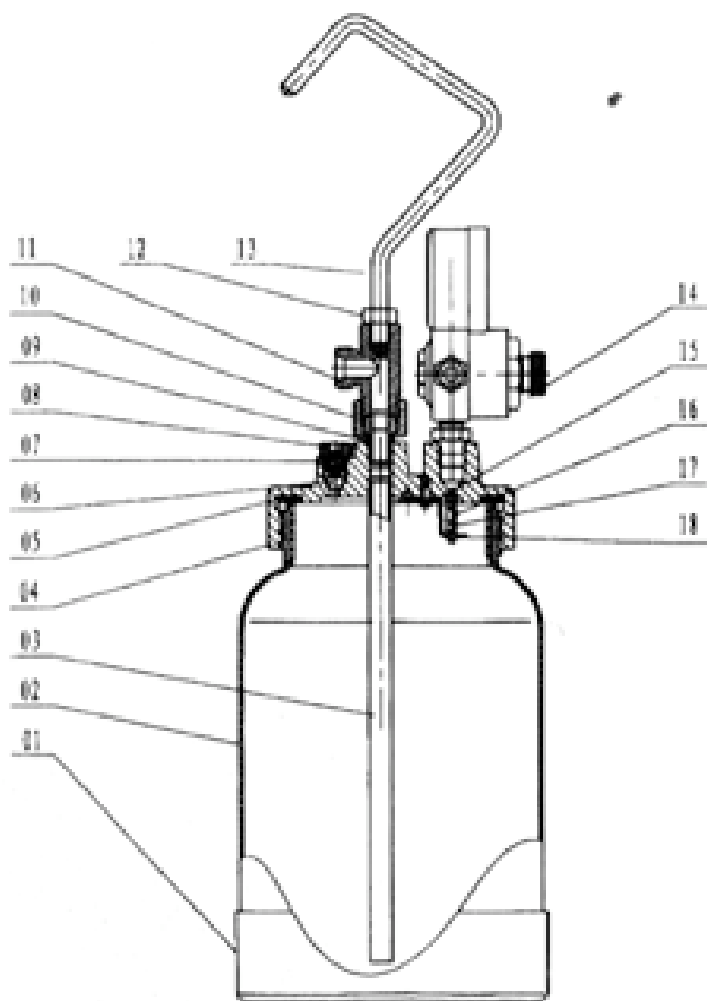

Liste de pièces B — Réservoir complet

01	Dessous	10	Tige centrale
02	Réservoir	11	Sortie du liquide
03	Tube pour liquide	12	Écrou
04	Couvercle	13	Poignée
05	Rondelle en caoutchouc	14	Régulateur complet
06	Joint d'étanchéité en latex	15	Vis
07	Ressort	16	Clapet de retenue
08	Soupape de sûreté	17	Ressort
09	Bouchon d'entrée de la peinture	18	Rondelle