


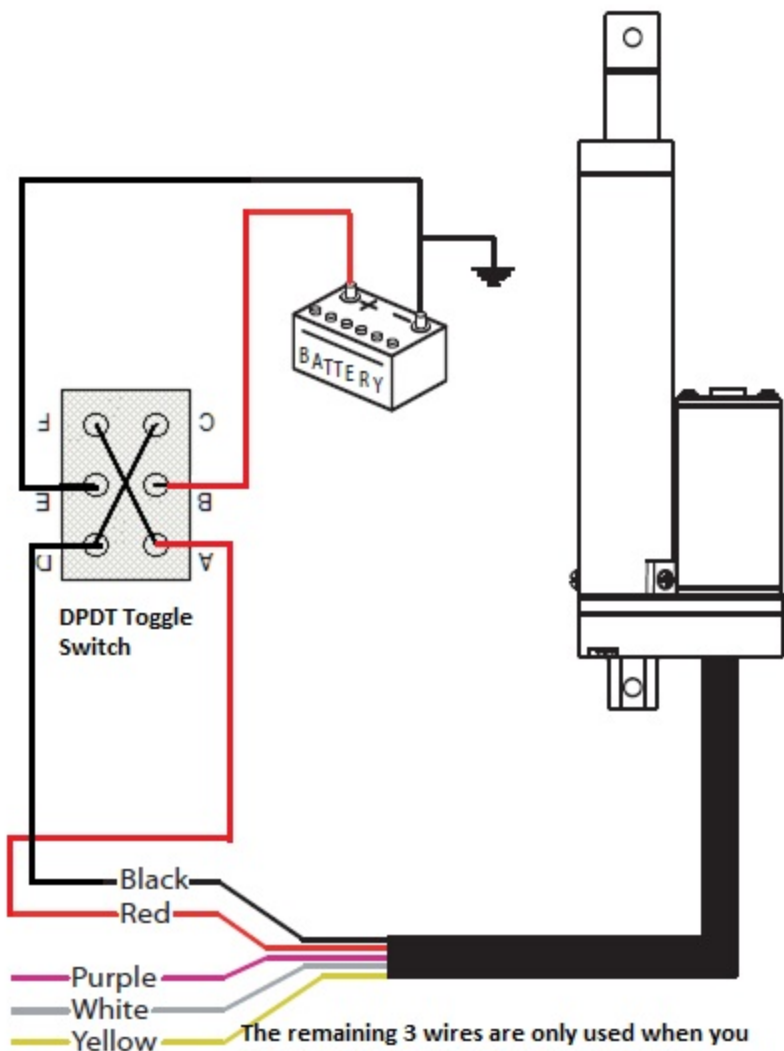

The remaining 3 wires are only used when you use a positioning sensor like the 8272676 Linear Actuator Controller.