


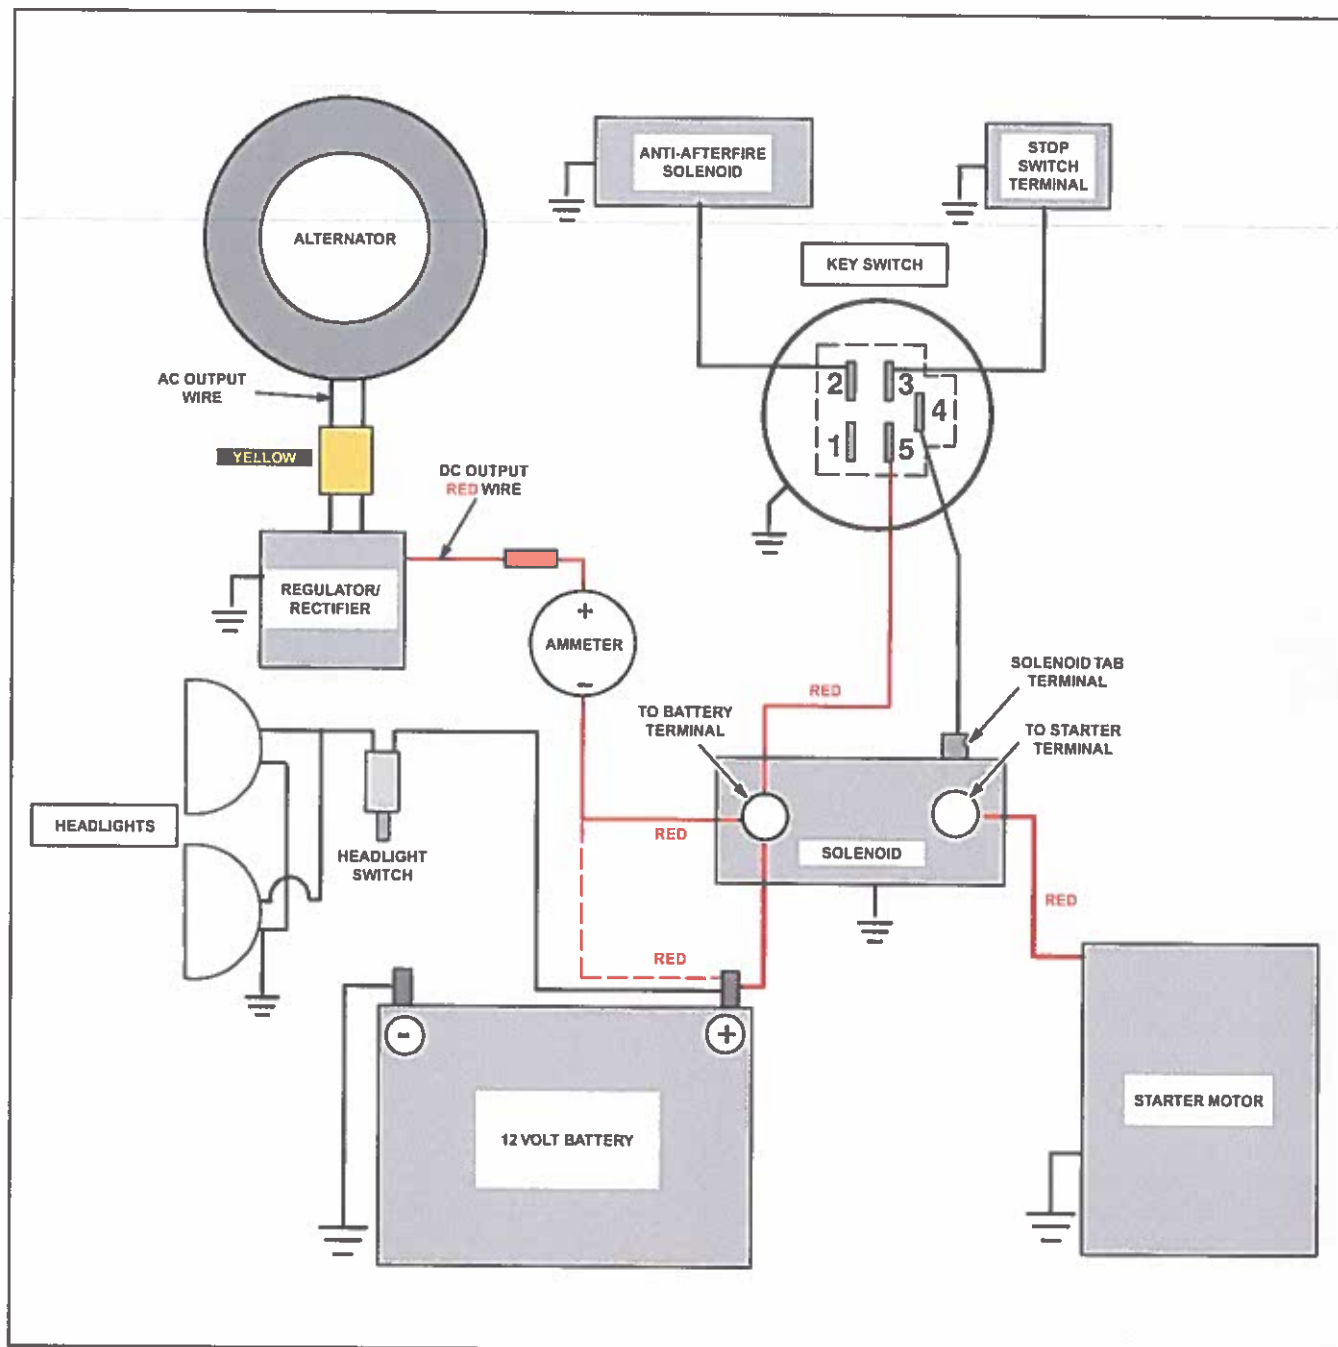

**Typical 16 Amp Regulated Alternator
Wiring Diagram
5-Pole Key Switch – Briggs & Stratton Part# 692318**

KEY SWITCH TEST	
SWITCH POSITION	CONTINUITY
1. OFF	*1 + 3
2. RUN	2 + 5
3. START	2 + 4 + 5

*Terminal 1 Grounded Internally
To Key Switch Case

TERMINAL NO.	FUNCTION
1	Ground (Used only with insulated panel)
2	To Carburetor Solenoid
3	To Stop Switch Terminal On Engine
4	To Solenoid (Tab terminal)
5	To Battery (Battery terminal on solenoid)