


PARTS BREAKDOWN

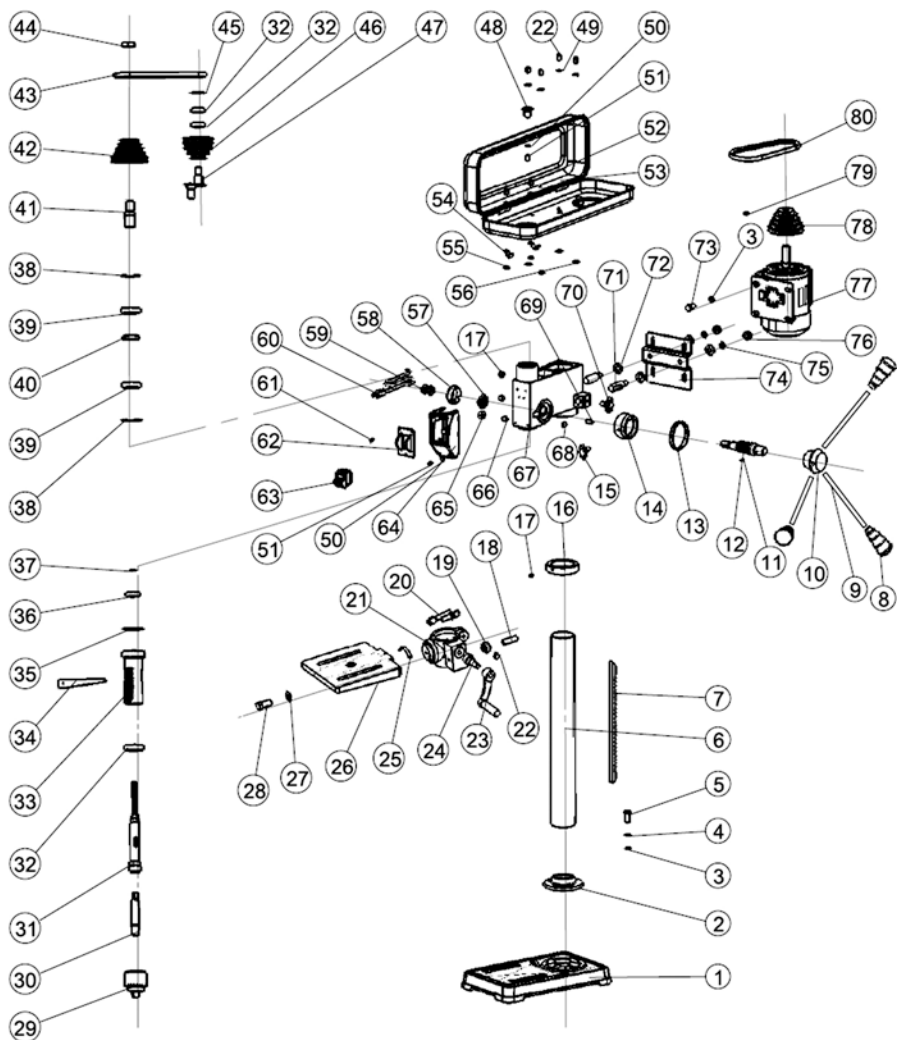

PARTS LIST


PART#	DESCRIPTION	QTY
1	Base	1
2	Column Support	1
3	Flat Washer 8	7
4	Spring Washer	7
5	Bolt M8 × 25	3
6	Column	1
7	Rack	1
8	Feed Handle	3
9	Feed Bar	3
10	Feed Bar Seat	1
11	Pin 5×30	1
12	Shaft Pinion	1
13	Depth Scale	1
14	Depth Stop	1
15	Fastening Knob	1
16	Collar	1
17	Set Screw M8 × 10	3
18	Axle	1
19	Gear	1
20	Table Pivot Lever	1
21	Table Support	1
22	Screw M6 × 12	5
23	Height Crank	1
24	Shaft	1
25	Angle Scale	1
26	Table	1
27	Spring Washer 12	1
28	Angle Bolt M12 × 30	1
29	Chuck	1
30	Arbor	1

31	Spindle	1
32	Ball Bearing 6201	1
33	Spindle Sleeve	1
34	Key	1
35	O-Ring	1
36	Ball Bearing 6005	1
37	Retaining Ring 12	1
38	Retaining Ring 42	2
39	Ball Bearing 6004	2
40	Bushing	1
41	Internal Spindle Sleeve	1
42	Spindle Pulley	1
43	V-Belt 0-480	1
44	Nut M20 × 1.5	1
45	Retaining Ring 32	1
46	Middle Pulley	1
47	Pulley Adjuster	1
48	Knob	1
49	Flat Washer 6	4
50	Flat Washer 5	3
51	Screw M5 × 10	5
52	Screw M6 × 10	2
53	Pulley Cover	1
54	Wire Clamp	2
55	Nut M6	2
56	Rubber Pad	4
57	Tension Spring	1
58	Spring Cap	1
59	Nut M12 × 1.5	2
60	Power Cord	1

PART#	DESCRIPTION	QTY
61	Screw ST2.9 × 10	3
62	Switch Cover	1
63	Power Switch	1
64	Switch Box	1
65	Nut M8	1
66	Screw	1
67	Headstock	1
68	Depth Pointer	1
69	Round Pin	1
70	Knob	2

71	Motor Support	2
72	Flat Washer 10	4
73	Bolt M8 × 20	4
74	Motor Bracket	1
75	Spring Washer 10	2
76	Nut M10	2
77	Motor	1
78	Motor Pulley	1
79	Screw M6 ×10	1
80	V-Belt 0-450	1

PARTS BREAKDOWN

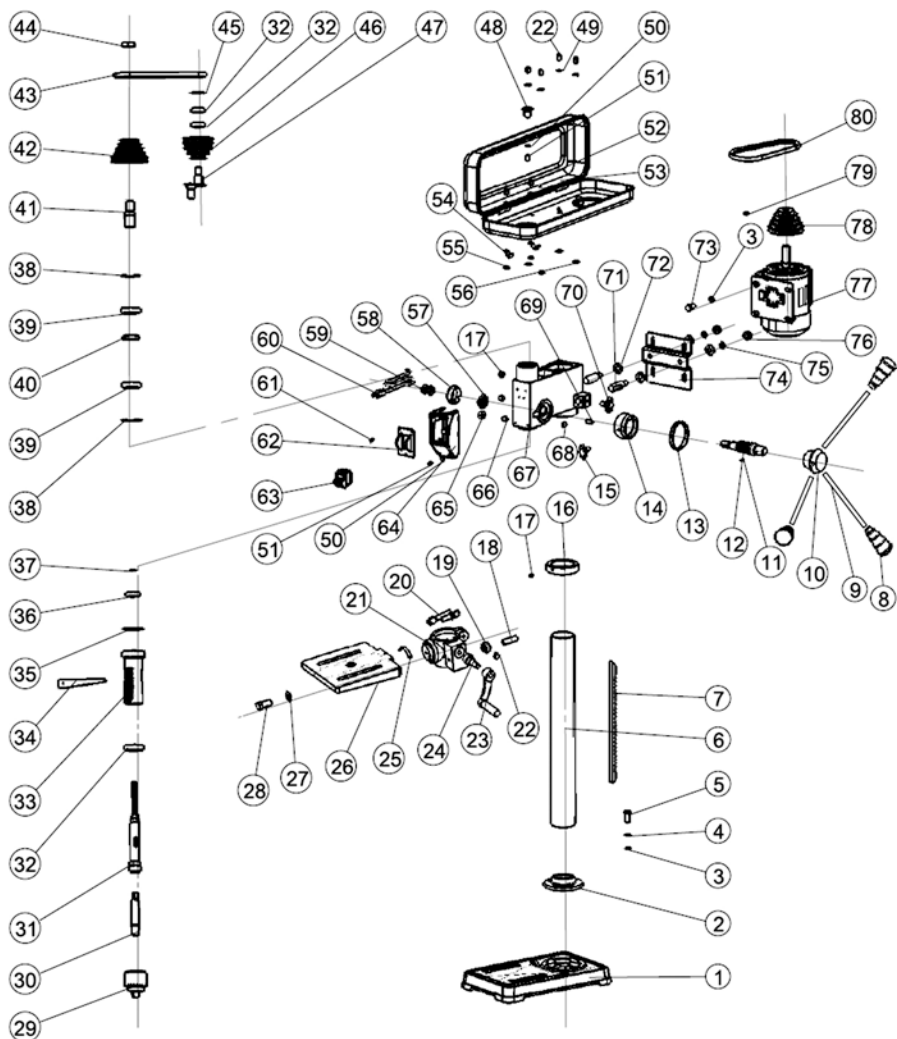

PARTS LIST

PART#	DESCRIPTION	QTY
1	Base	1
2	Column Support	1
3	Flat Washer 8	7
4	Spring Washer	7
5	Bolt M8 × 25	3
6	Column	1
7	Rack	1
8	Feed Handle	3
9	Feed Bar	3
10	Feed Bar Seat	1
11	Pin 5×30	1
12	Shaft Pinion	1
13	Depth Scale	1
14	Depth Stop	1
15	Fastening Knob	1
16	Collar	1
17	Set Screw M8 × 10	3
18	Axle	1
19	Gear	1
20	Table Pivot Lever	1
21	Table Support	1
22	Screw M6 × 12	5
23	Height Crank	1
24	Shaft	1
25	Angle Scale	1
26	Table	1
27	Spring Washer 12	1
28	Angle Bolt M12 × 30	1
29	Chuck	1
30	Arbor	1

31	Spindle	1
32	Ball Bearing 6201	1
33	Spindle Sleeve	1
34	Key	1
35	O-Ring	1
36	Ball Bearing 6005	1
37	Retaining Ring 12	1
38	Retaining Ring 42	2
39	Ball Bearing 6004	2
40	Bushing	1
41	Internal Spindle Sleeve	1
42	Spindle Pulley	1
43	V-Belt 0-480	1
44	Nut M20 × 1.5	1
45	Retaining Ring 32	1
46	Middle Pulley	1
47	Pulley Adjuster	1
48	Knob	1
49	Flat Washer 6	4
50	Flat Washer 5	3
51	Screw M5 × 10	5
52	Screw M6 × 10	2
53	Pulley Cover	1
54	Wire Clamp	2
55	Nut M6	2
56	Rubber Pad	4
57	Tension Spring	1
58	Spring Cap	1
59	Nut M12 × 1.5	2
60	Power Cord	1

PART#	DESCRIPTION	QTY
61	Screw ST2.9 × 10	3
62	Switch Cover	1
63	Power Switch	1
64	Switch Box	1
65	Nut M8	1
66	Screw	1
67	Headstock	1
68	Depth Pointer	1
69	Round Pin	1
70	Knob	2

71	Motor Support	2
72	Flat Washer 10	4
73	Bolt M8 × 20	4
74	Motor Bracket	1
75	Spring Washer 10	2
76	Nut M10	2
77	Motor	1
78	Motor Pulley	1
79	Screw M6 ×10	1
80	V-Belt 0-450	1