


DISPOSAL

Recycle a tool damaged beyond repair at the appropriate facility.

TROUBLESHOOTING

Visit a Princess Auto Ltd. location for a solution if the tool does not function properly or parts are missing. If unable to do so, have a qualified technician service the tool.

PARTS BREAKDOWN

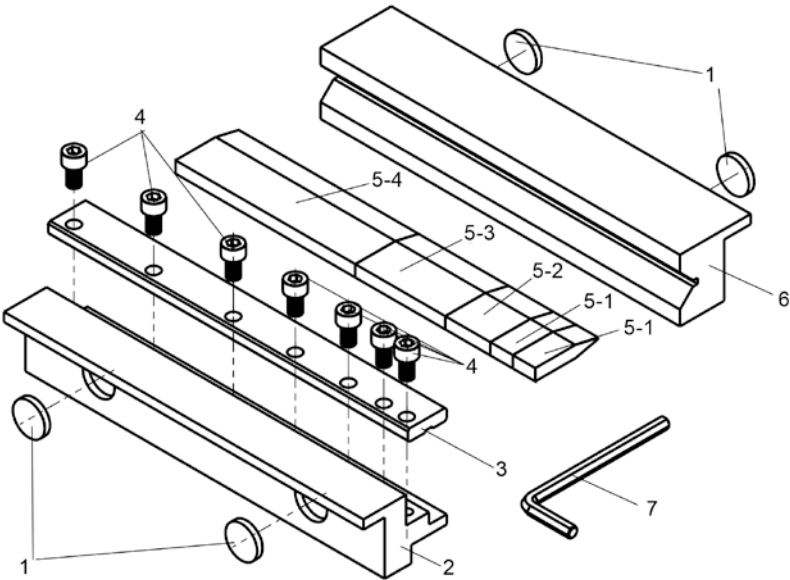


PARTS LIST

#	DESCRIPTION	QTY
1	Magnetic Block	4
2	Die Holder	1
3	Pressing Plate	1
4	Screw M6*12	7
5-1	Die, 1/2 in.	2

5-2	Die, 1 in.	1
5-3	Die, 2 in.	1
5-4	Die, 4 in.	1
6	Bending Block	1
7	Hex Key	1

RÉPARTITION DES PIÈCES

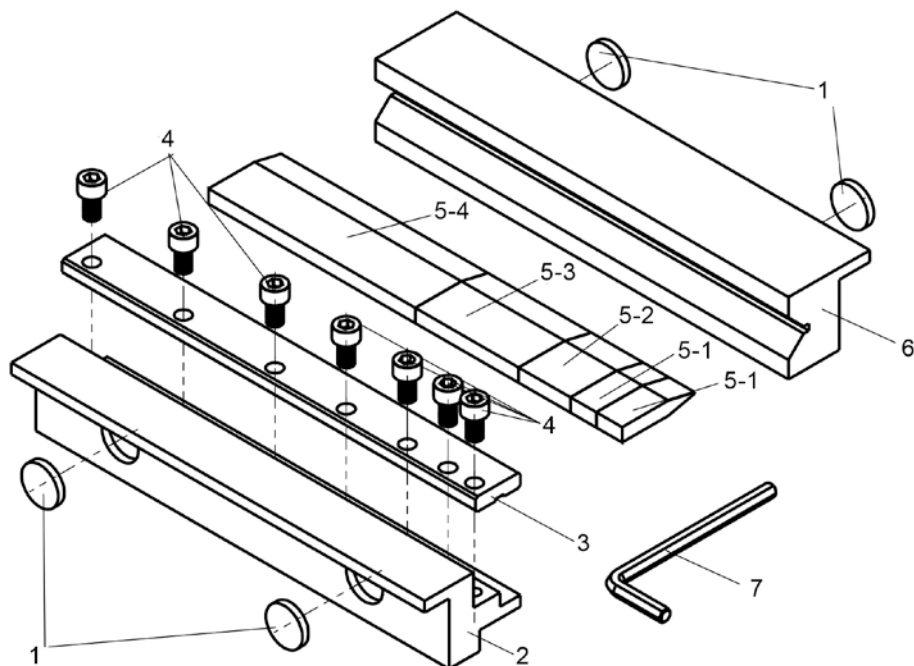

LISTE DES PIÈCES

N°	DESCRIPTION	QTÉ
1	Blocage magnetique	4
2	Support de matrice	1
3	Plaque de pression	1
4	Vis M6*12	7
5-1	Matrice de 1/2 po	2
5-2	Matrice de 1 po	1
5-3	Matrice de 2 po	1
5-4	Matrice de 4 po	1
6	Bloc de cintrage	1
7	Clé hexagonale	1