



PARTS BREAKDOWN

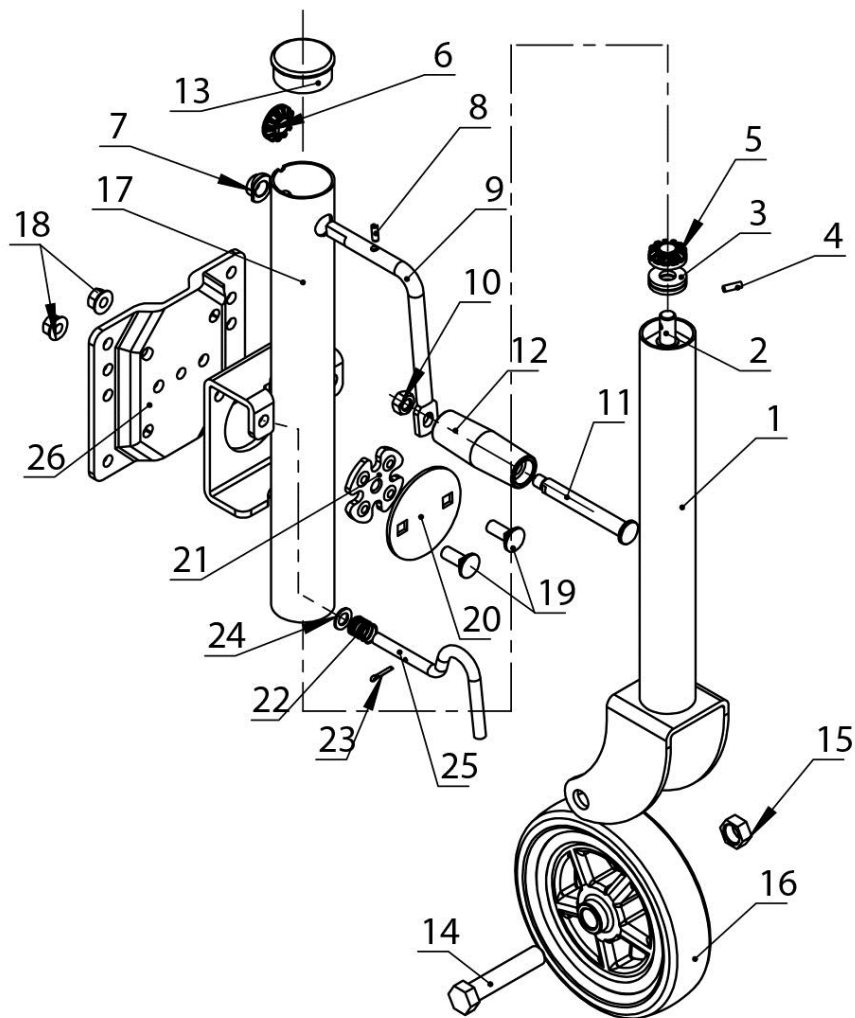

PARTS LIST

#	DESCRIPTION	QTY			
1	Inner Tube	1	14	Bolt	1
2	Screw Rod	1	15	Lock Nut M16	1
3	Bearing	1	16	Wheel	1
4	Pin	1	17	Outer Tube	1
5	Gear	1	18	Nut	2
6	Gear	1	19	Bolt	2
7	Bushing	1	20	Large Washer	1
8	Pin	1	21	Bracket	1
9	Crank	1	22	Spring	1
10	Lock Nut M10	1	23	Bolt	1
11	Bolt	1	24	Washer	1
12	Crank Grip	1	25	Handle	1
13	Plastic Cover	1	26	Mounting Bracket	1

RÉPARTITION DES PIÈCES

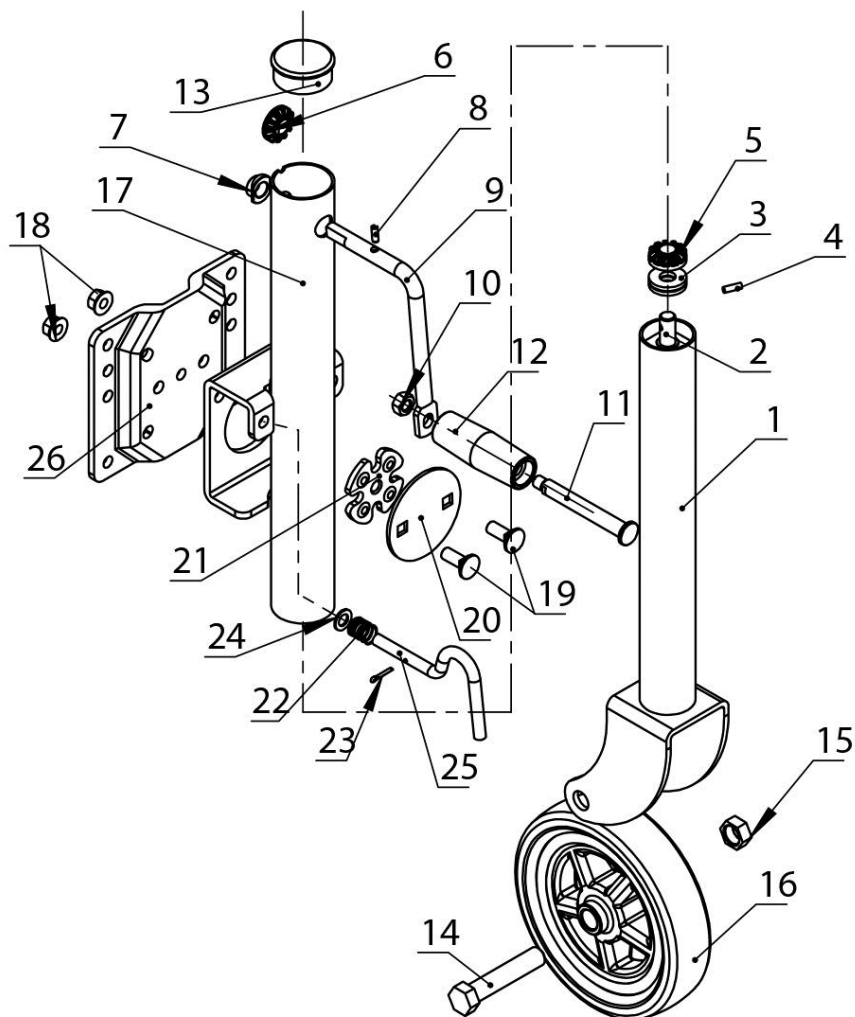

LISTE DES PIÈCES

N°	DESCRIPTION	QTÉ			
1	Tube intérieur	1	14	Boulon	1
2	Tige filetée	1	15	Contre-écrou M16	1
3	Roulement	1	16	Roue	1
4	Goupille	1	17	Tube extérieur	1
5	Engrenage	1	18	Écrou	2
6	Engrenage	1	19	Boulon	2
7	Bague	1	20	Grande rondelle	1
8	Goupille	1	21	Support	1
9	Manivelle	1	22	Ressort	1
10	Contre-écrou M10	1	23	Boulon	1
11	Boulon	1	24	Rondelle	1
12	Poignée de manivelle	1	25	Poignée	1
13	Couvercle en plastique	1	26	Support de montage	1