




1000lb Swing-up Trailer Jack w/Wheel

User Manual

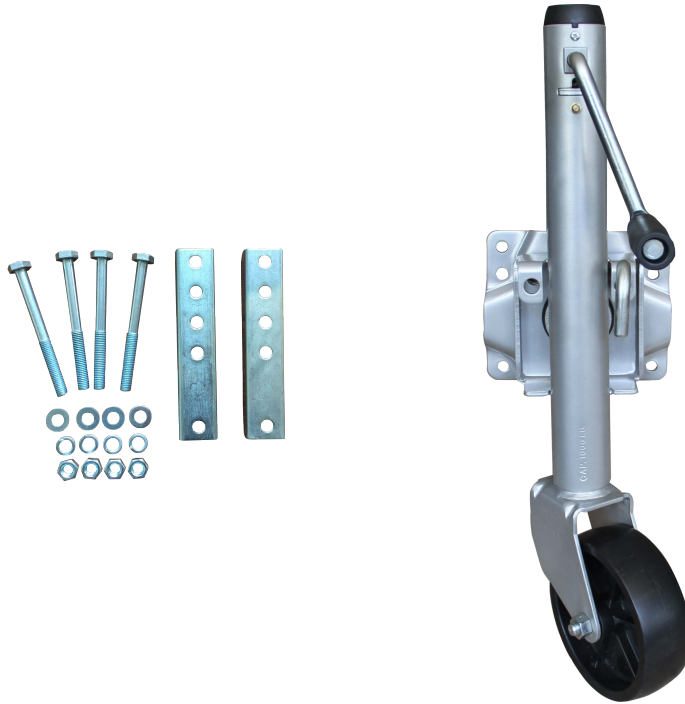

Installation & Use instructions, Please read before beginning.

Hazard Definitions

Please familiarize yourself with hazard notices found in this manual. A notice is an alert that there is a possibility of property damage, injury or death if certain instructions are not followed.

WARNING! This notice indicates a specific hazard or unsafe practice that could result in severe personal injury or death if the proper precautions are not taken

CAUTION! This notice indicates a potentially hazardous situation that may result in minor or moderate injury if proper practices are not taken

NOTICE! This notice indicates that a specific hazard or unsafe practice will result in equipment or property damage, but not personal injury



Warning

1. Do not exceed rated load capacity.
2. Always secure trailer from rolling when coupling or uncoupling your trailer.
3. Only mount this jack on a square or rectangular trailer tongue.
4. Excessive side loading should be avoided.
5. Make sure the plunger pins are properly locked into the detent holes in the mounting bracket before operating the jack.
6. Jack must be secured in fold up position before towing.
7. When raising or lowering jack, keep body and feet clear of trailer tongue.
8. To minimize stress on the jack, its components and to allow castoring of the wheel. Always crank the jack two revolutions above the fully down position when moving trailer.
9. Inspect before each use. Do not use if parts are loose or damaged.
10. Failure to follow these instructions may result in serious injury or property damage.

Installation

1. Locate jack so handle clears obstructions when cranking and jack is clear to swivel.
2. Mount jack to trailer tongue using the hardware provided. Insert 4 bolts through the mounting plate, 2 above and 2 below trailer tongue. Attached backing plates to bolts from opposite side of tongue, tighten securely with lock washers and nuts. Torque the nuts to 25 ft. -lb.
3. Check for clearance of handle swing and coupler clearance.
4. Mounting plate may be welded to trailer tongue if desired. Locate jack as above and weld to tongue using a 5/32-in. minimum fillet weld all around perimeter of bracket.
5. To lubricate - Remove cap from top of jack, then spoon in grease until gears are fully covered, replace cap. Be sure to also lubricate Jack Screw through grease fitting. Periodically check grease if used frequently.

Parts list and Assembly Diagram

