



PARTS BREAKDOWN

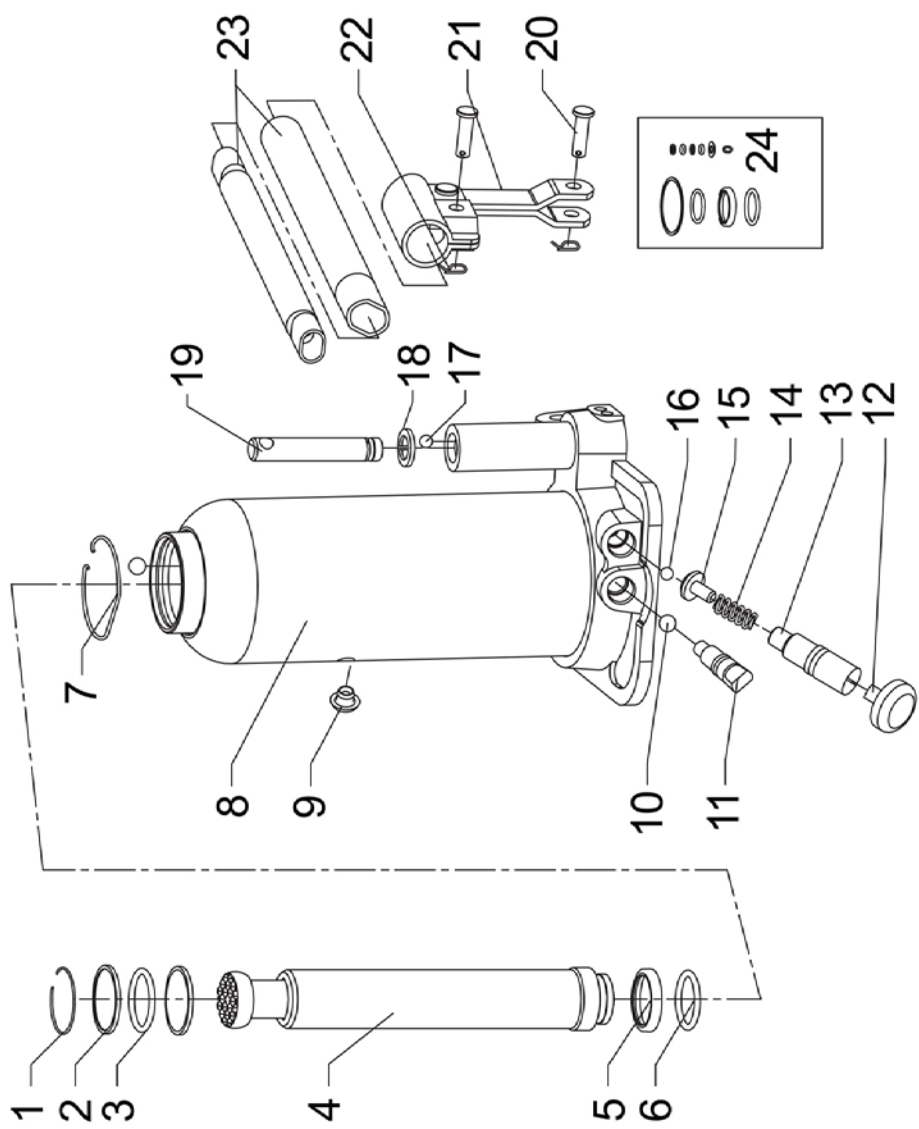

PARTS LIST

#	DESCRIPTION	QTY			
1	Round Wire Snap Ring	1	13	Adjusting Screw Assembly	1
2	Rectangular Ring	2	14	Spring	1
3	O-ring	1	15	Spring Holder	1
4	Piston Rod Assembly	1	16	Steel Ball 3mm	1
5	Bowl Washer	1	17	Steel Ball 5mm	2
6	O-ring	1	18	Bowl Washer	1
7	Round Wire Snap Ring	1	19	Pump Plunger Assembly	1
8	Base Welding Parts	1	20	Pin	2
9	Oil Plug	1	21	Handle Socket Assembly	1
10	Steel Ball 6mm	1	22	Cutter Pin	2
11	Release Valve Assembly	1	23	Handle Assembly	1
12	Plastic Plug	1	24	Seal Kit	1

RÉPARTITION DES PIÈCES

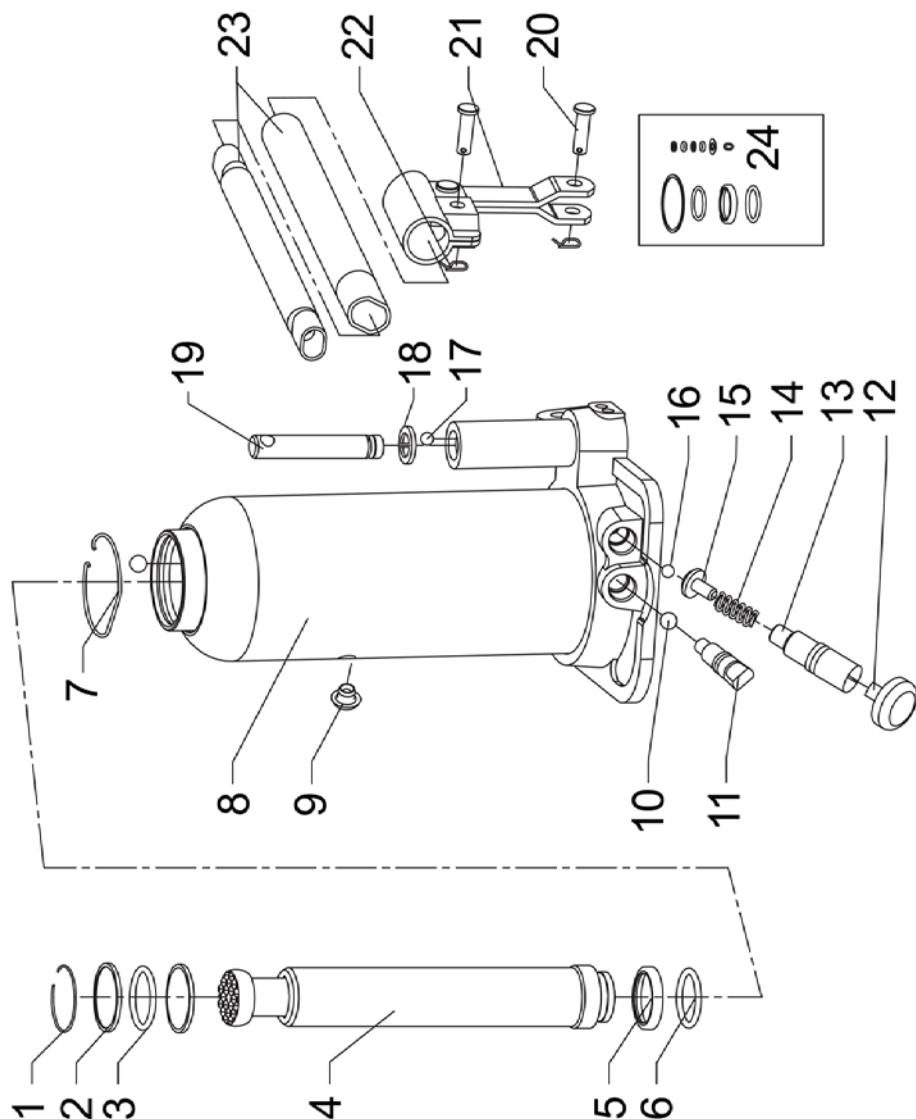

LISTE DES PIÈCES

N°	DESCRIPTION	QTÉ
1	Anneau élastique de fil rond	1
2	Anneau rectangulaire	2
3	Joint torique	1
4	Ensemble de tige de piston	1
5	Rondelle concave	1
6	Joint torique	1
7	Anneau élastique de fil rond	1
8	Pièces de soudage de base	1
9	Bouchon d'huile	1
10	Bille en acier de 6 mm	1
11	Ensemble de valve de purge	1

12	Bouchon en plastique	1
13	Ensemble de vis de réglage	1
14	Ressort	1
15	Douille à ressort	1
16	Bille en acier de 3 mm	1
17	Bille en acier de 5 mm	2
18	Rondelle concave	1
19	Ensemble de piston plongeur de la pompe	1
20	Goupille	2
21	Ensemble de douille de poignée	1
22	Goupille fendue	2
23	Ensemble de la poignée	1
24	Trousse d'étanchéité	1