


PARTS BREAKDOWN

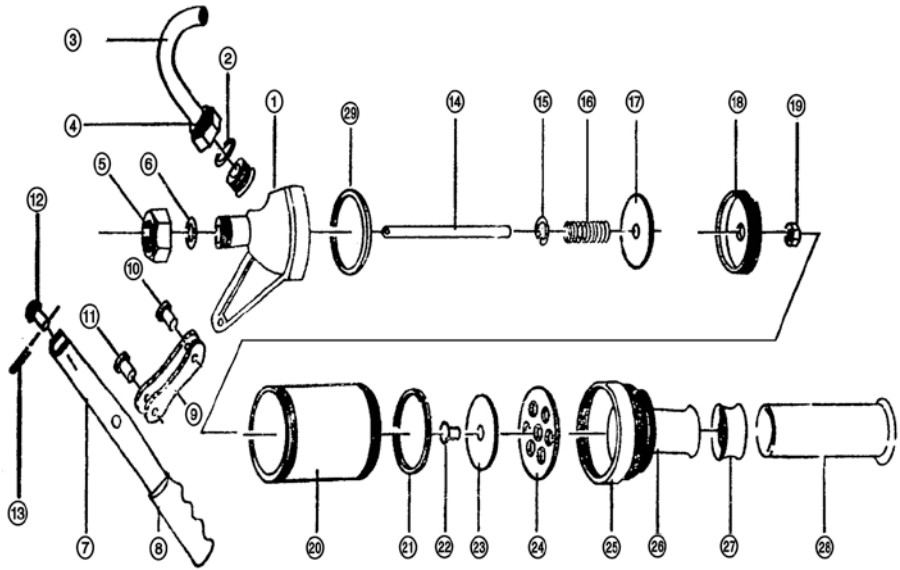


PARTS LIST

#	DESCRIPTION	QTY
1	Pump Head	1
2	Spout Seal	1
3	Spout	1
4	Coupling Nut	1
5	Piston Rod Nut	1
6	Piston Rod Seal	1
7	Handle	1
8	Coated Vinyl Grip	1
9	Handle Level	2
10	Lever Rivet	1
11	Lever Rivet	1
12	Handle Lever	1
13	Split Pin	1
14	Piston Rod	1

15	C-Clip	1
16	Valve Spring	1
17	Valve Plate	1
18	Valve Base	1
19	Valve Nut	1
20	Barrel	1
21	Foot Valve Seal	1
22	Base Plate Rivet	1
23	Base Plate A	1
24	Base Plate B	1
25	Base	1
26	Telescopic Tube	1
27	Telescopic Tube Seal	1
28	Telescopic Tube	1
29	Barrel Gasket	1

RÉPARTITION DES PIÈCES

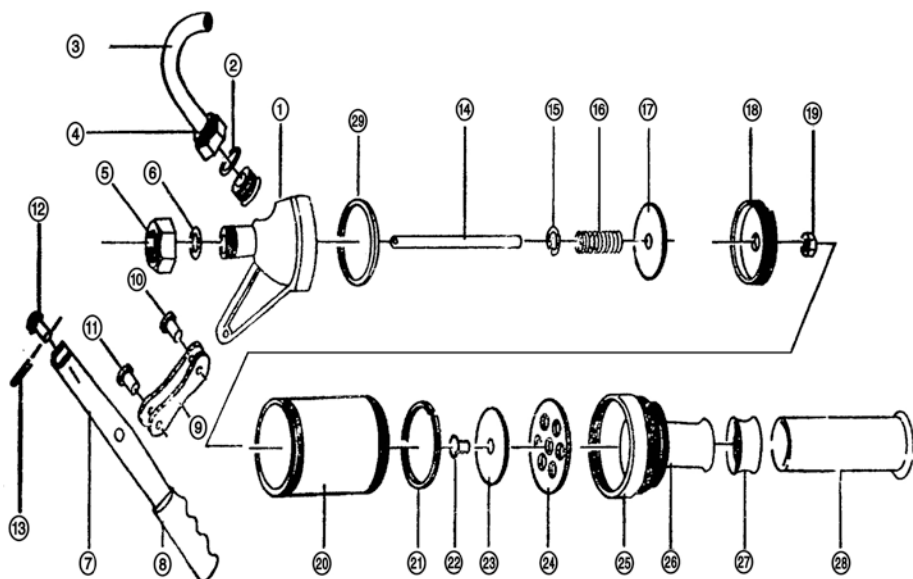

LISTE DES PIÈCES

N°	DESCRIPTION	QTÉ
1	Tête de pompe	1
2	Joint de bec verseur	1
3	Bec verseur	1
4	Écrou d'assemblage	1
5	Écrou de tige de piston	1
6	Joint de tige de piston	1
7	Poignée	1
8	Prise en vinyle	1
9	Niveau de poignée	2
10	Rivet de levier	1
11	Rivet de levier	1
12	Levier de poignée	1
13	Goupille fendue	1
14	Tige de piston	1

15	Pince en C	1
16	Ressort de soupape	1
17	Plaque de soupape	1
18	Base de soupape	1
19	Écrou de soupape	1
20	Baril	1
21	Joint de soupape de pied	1
22	Rivet de la plaque de base	1
23	Plaque de base A	1
24	Plaque de base B	1
25	Base	1
26	Tube télescopique	1
27	Joint de tube télescopique	1
28	Tube télescopique	1
29	Joint d'étanchéité de baril	1