



3-1/4 in Chainsaw Log Peeler Attachment

INSTRUCTION MANUAL



⚠ WARNING

**READ AND UNDERSTAND THIS INSTRUCTION MANUAL
PRIOR TO USING THIS PRODUCT. FAILURE TO DO SO
MAY RESULT IN SERIOUS INJURY OR DEATH.**

Keep this instruction manual for future reference.

This Log Peeler attachment is designed to be used as an attachment to a chainsaw and used to assist in the debarking and/or shaving of logs. Easily attaching to most 65cc or smaller chainsaws with a chain pitch of 0.325" and 3/8" (0.375") , the Chainsaw Log Peeler will convert a chainsaw into a powered debarking tool and will reduce or eliminate the need for hand stripping with a draw knife or manual barking spud.

SPECIFICATIONS

Frame Body	Lightweight cast aluminum body with durable powder-coated finish
Cutting Head	Steel construction with long-life roller bearings
Blades	Two (2) replaceable Tungsten Carbide planer blades, 3-¼ in. (82.5 mm) wide, each held with three (3), ¼ in. (6.35 mm), bolts.
Chain Pitch	Two Sprockets included, 0.325 in. and 0.375 in. (3/8 in.) Pitch
For use with	Most 65cc or smaller chainsaws
Dimensions (L x W x H)	10 in. x 5 in. x 3 in.

The safety instructions provided in this manual are not intended to cover all possible conditions and practices that may occur when using, maintaining and cleaning the product.

Always use common sense and pay particular attention to all DANGER, WARNING, CAUTION, and NOTICE statements of this manual.

WARNING SYMBOLS AND DEFINITIONS	
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	Addresses practices not related to personal injury.
CAUTION	

Symbol	Property or Statement
	Read and understand this instruction manual prior to using this product.

Symbol	Property or Statement
	Cut or sever hazard.

Symbol	Property or Statement
	Read and understand this instruction manual prior to using this product.
	Wear ANSI approved (or applicable national standard) goggles or properly fitted protective glasses with top and side protection.
	Use approved hearing protection such as ear plugs or ear muffs.

Symbol	Property or Statement
	Reactive forces/kickback hazard.
	Wear safety gloves.
	Use safety footwear.

This instruction manual is intended for your benefit. Please read and follow the safety, installation, maintenance and troubleshooting steps described herein to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

UNPACKING & INSPECTION

When unpacking, please inspect the product carefully to ensure the product is intact and undamaged. If any parts are missing or broken, please call 1-800-386-0191 as soon as possible.

**WARNING**

Do not operate this product if damaged during shipment, handling, or after misuse. Do not operate the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage.

Remove the parts and accessories from the packaging and inspect for damage. Make sure that all items in the contents are included.

Package contents:

- Chainsaw Log Peeler Attachment
 - 0.375 (3/8 in.) Pitch Sprocket
- Mounting Hardware

GENERAL SAFETY RULES

**WARNING**

READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS. Failure to follow the warnings and instructions may result in electric shock, serious injury and/or DEATH.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

WORK AREA SAFETY

- **Operate in a safe work environment.** Keep your work area clean, well-lit and free of distractions. Place lights so you are not working in a shadow.
- **Keep anyone not wearing appropriate safety equipment away from the work area.**
- **Store properly and in a safe and dry location.** Keep out of reach of children.
- **Do not install or use in the presence of flammable gases, dust, or liquids.**

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating this product.** Do not use this product while you are tired or under the influence of drugs, alcohol or medication.


A moment of inattention while operating may result in serious personal injury.

- **Use personal protective Equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, and hearing protection will reduce personal injuries.
- **Do not let familiarity gained from frequent use to allow you to become complacent and ignore safety principles.** A careless action can cause severe injury within a fraction of a second.
- **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- **All users must understand the operation of all controls and learn how to stop the chainsaw quickly in case of emergency.**

SPECIFIC SAFETY PRECAUTIONS

- Follow all safety procedures and practices as described in your chainsaw manual.
- Always keep hands and limbs away from the attachment and the chainsaw chain.
- Do not use the attachment if any parts are damaged, broken, misplaced, or if the attachment has been subjected to a dynamic shock load. Have a qualified technician inspect, repair, or replace parts as needed.
- Do not turn the blade by hand when mounted on the chainsaw.
- Do not force the attachment. Use the correct tool for your application. The attachment will do the work better and safer at the rate and application for which it was designed.
- All users must understand the operation of the attachment and learn how to stop the chainsaw quickly in case of emergency.

- Do not modify the log peeler in any way. Modification may impair the safety, function, and affect the life of the equipment.
- Only use this Chainsaw Log Peeler Attachment for cutting wood. Cutting materials other than wood will damage the blades and may damage the attachment.
- Always check for damaged or worn-out parts before using the log peeler. Broken parts will affect the log peeler operation. Replace or repair damaged or worn parts immediately.

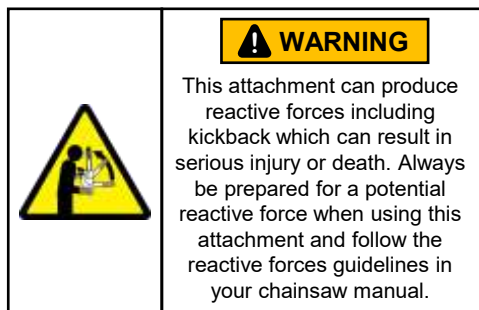

INSTALLATION AND ASSEMBLY

Numbered references in parenthesis (#1) refer to the included Parts List at the end of this instruction manual.


SPROCKET ASSEMBLY

The Chainsaw Log Peeler Attachment comes with two sprockets, one that is installed on the attachment, and the other that is included with the hardware.

To find out the pitch of your chain, locate the chain information on your chainsaw's bar.


If the pitch is not printed on the chainsaw bar, measure the distance between any three rivets on the chain and divide in half (Fig.1). For example, if the distance measured is 3/4 in., then the pitch on your chain is 3/8 in.

Another way to check the chain pitch is to place the chain around each included sprocket (0.375 in. and 0.325 in.) and choose the one that matches the pitch of the chain.

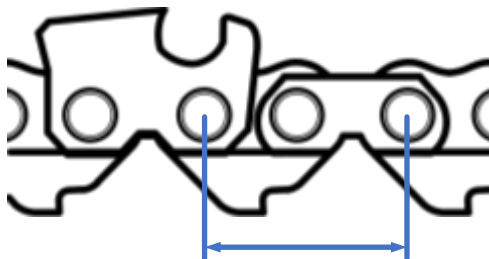

$$\text{Pitch} = \frac{\text{Distance Any Between 3 Rivets}}{2}$$

Fig. 1

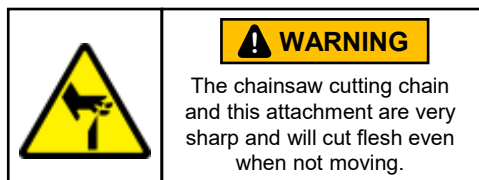

Once you have chosen the correct sprocket, install the sprocket onto the Chainsaw Log Peeler Attachment, if it is not already installed.

To install the alternative sprocket:

1. Carefully clamp the Chainsaw Log Peeler Attachment in a vice, clamping only on the portion of the Frame Body (#10) that attaches to the chainsaw blade.
2. Use a wrench to hold the Spline Adapter (#9) and remove the Drive Bolt (#1) with another wrench.
3. Remove the Spline Adapter (#9) and Sprocket (#8) from the assembly.
4. Place the alternative Sprocket (#8) onto the Spline Adapter (#9).
5. While ensuring the Flat Washer (#6) is installed correctly, re-assemble the Chainsaw Log Peeler. If desired, add a drop of BLUE thread locker.

INSTALLING THE ATTACHMENT

Chainsaw bars come in even number sizes. For example, chainsaw bars come in 14, 16, and 18 in. lengths.

A 16 in. bar is recommended to use this attachment.

Before installing this attachment, and for correct operation, **a chain that fits the next larger size chainsaw bar is required.** For example, if the attachment is to be installed on a chainsaw with a 14 in. bar, a chain for a 16 in. bar will be needed. Use the chart below to ensure you have the correct chain for the bar on your chainsaw to operate this attachment.

Chainsaw Bar Size	Need Chain for Bar Size
12 in.	14 in.
14 in.	16 in.
16 in.	18 in.
18 in.	20 in.
20 in.	NOT RECOMMENDED

To install the Chainsaw Log Peeler Attachment onto your chainsaw's bar:

- Follow the instructions in your chainsaw manual to remove the chainsaw bar (Fig. 2 - A).
- Place the bar on a flat surface. Use a straight-edge and awl to scribe a centerline down the length of the bar (Fig. 2- B).
- Place the attachment onto the bar and line up the center of the two slots on the Frame Body (#10) with the scribed line (Fig. 2 –C).
- Ensure there is a gap of approximately 1-1/4 in. (32 mm) between the end of the bar and the Sprocket (#8) on the attachment as shown in Fig. 2-D)

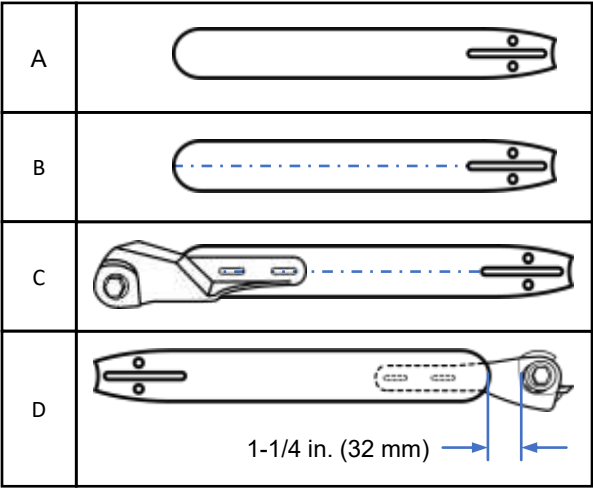


Fig. 2

- Use an awl or marker, mark the forward most radius of each slot onto the bar, as circled in Fig. 3 - A.
- Remove the attachment then measure 1/4 in. away from the marks made in the last step and mark. Use a center punch to mark where to drill as shown in Fig. 3 –B.

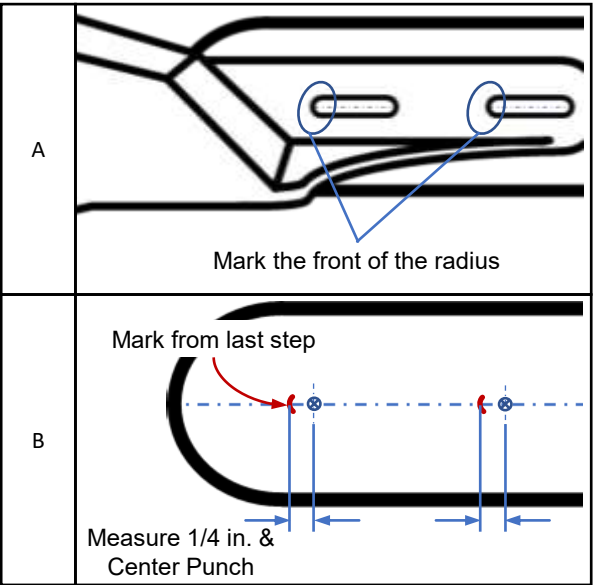


Fig. 3

- Use a 5/16 in. drill to drill the mounting holes. A drill press is recommended to drill the holes accurately and straight. If a drill press is not available, use a hand drill and try to keep the drill perpendicular to the bar. Remember to clamp the bar to a solid surface with a piece of scrap wood underneath to reduce any burrs on the back side.
 - Once the holes are drilled, place a mounting Bolt (#14) through each hole in the bar, then put the Chainsaw Log Peeler Attachment onto the bolts with the blade opening on the return side (or bottom) of the bar. Place a Flat Washer (#13), a Lock Washer (#12), and a Nut (#11) onto each mounting Bolt. Do not tighten the mounting bolts.
 - Follow the procedure described in your chainsaw manual to install the bar and chain, but do not tension the chain yet. Be sure the chain tensioning mechanism on your chainsaw is loosened as far as it will go.
 - Push the Chainsaw Log Peeler away from the end of the bar as far as it will go to tighten the chain, then use a pair of wrenches to tighten the bolts to 160 in-lbs.
- CAUTION!** Do not over-tighten the bolts. Over-tightening the bolts will crush the bolting area of the Frame Housing (#10).
- Follow the procedure described in your chainsaw manual to tension the chain. Carefully check that the chain tension is correct and that both the chain and attachment move freely. Re-adjust the chain tension if necessary.

About blade adjustment

The planer blades on the Chainsaw Log Peeler Attachment are adjusted at the factory to remove a depth of 1/32 in. with each rotation. Any attempt to adjust or increase the depth could cause shavings to

become lodged under the blades and may, along with causing excessive wear on your chain saw, cause the chain to stretch.

OPERATION

⚠ WARNING

Do not attempt to cut straight into the wood with the Log Peeler Attachment.

The safety procedures and practices as described in your chainsaw manual and as required by federal, state, or provincial law are still applicable while using this tool.

Operating the Chainsaw Log Peeler Attachment

The Chainsaw Log Peeler Attachment operates best when the tool is “dragged” along the tree bark and against the rotation of the tool (Fig. 4).

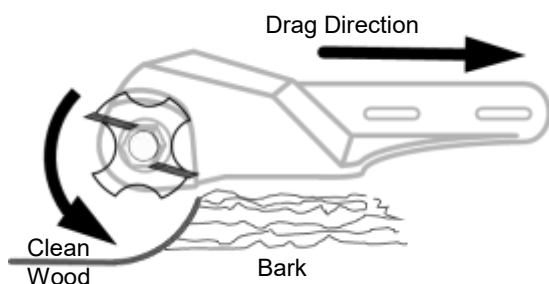


Fig. 4

CAUTION! Hard materials such as stones, nails, or other inclusions in the wood may cause damage to the blades. Pay close attention and avoid any kinds of inclusions.

MAINTENANCE

Before each use, inspect the Chainsaw Log Peeler Attachment for any damage.

During use, check for any abnormal noise or vibration. Stop use immediately and remedy the problem.

Blades may be resharpened by honing with a honing tool. Replace blades that are damaged beyond repair.

Lubrication is not necessary since this tool uses sealed bearings.

⚠ WARNING

Repair should only be made by qualified service personnel. An improperly repaired tool may present a hazard to the operator and/or others.

DISPOSAL

Recycle a tool damaged beyond repair at the appropriate facility.


Contact your local municipality for a list of disposal

facilities or by-laws for electronic devices, batteries, oil, or other toxic liquids.

NOTICE! Do not pollute the environment by allowing uncontrolled discharge of waste oil.

STORAGE

When not in use for an extended period, apply a thin coat of lubricant to the steel parts to avoid rust. Cover the tool and store in a dry location. Remove the lubricant before using again.

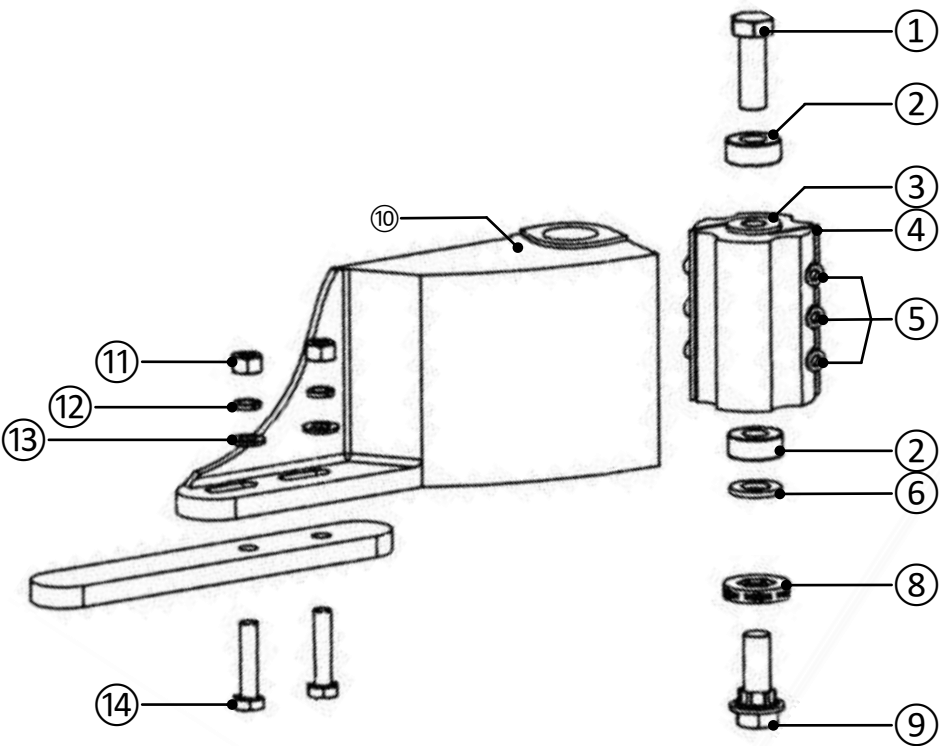

PARTS LIST

#	DESCRIPTION	QTY
1	Drive Bolt	1
2	Bearing 6201-2RS	2
3	Cutting Head	1
4	Tungsten Carbide Blade	2
5	Bolt, 1/4 in.	6
6	Flat Washer, 1/2 in.	1

#	DESCRIPTION	QTY
8	Sprocket, (0.375 in. and 0.325 in.)	2
9	Spline Adapter	1
10	Frame Body	1
11	Nut, 5/16 in.	2
12	Lock Washer, 5/16 in.	2
13	Flat Washer, 5/16 in.	2
14	Bolt, 5/16 in.	2

90 DAY LIMITED WARRANTY

Star Asia-USA, LLC (hereinafter "seller") warrants to the original purchaser only, that this product will be free from defects in material or workmanship for a period of 90 days from date of purchase for home domestic use.

Warranty Performance

Warranty coverage is conditioned upon purchaser furnishing seller or its authorized service center with adequate written proof of the original purchase date. Products returned, freight prepaid and insured, to our factory or to an Authorized Service Center will be inspected and repaired or replaced, at seller's option, free of charge if found to be defective and subject to warranty. Defective parts not subject to normal wear and tear will be repaired or replaced, at our option during the above stated warranty periods. In any event, reimbursement is limited to the purchase price paid. Other than the postage and insurance requirement, no charge will be made for repairs or replacements covered by this warranty. Under no circumstances shall the manufacturer bear any responsibility for loss of the unit, loss of time or rental, inconvenience, commercial loss or consequential damages. There are no warranties which extend beyond the description of the face hereof.

Exclusions

This warranty does not cover parts damaged due to normal wear, abnormal conditions, misapplication, misuse, abuse, accidents, operation at other than recommended pressures or temperatures, improper storage of freight damage. Parts damaged or worn by operation in dusty environments are not warranted. Failure to follow recommended operating and maintenance procedures also voids warranty. Additional items not covered under warranty: product failure caused by rain, excessive humidity, corrosive environments or other contaminants; cosmetic defects that do not interfere with product's functionality. This warranty shall not apply when: the product has been used for commercial or rental purposes; defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; this damage is due to abuse, improper maintenance, neglect or accident; or the damage is due to use of the product after partial failure or use with improper accessories. Warranty does not apply to accessory items. Seller will not be liable for: labor charges, loss or damage resulting from improper operation, maintenance or repairs made by persons other than a Star Asia-USA, LLC Authorized Service Center. The use of other than genuine Star Asia-USA, LLC repair parts will void warranty.

Warranty Disclaimers

NO WARRANTY, ORAL OR WRITTEN, OTHER THAN THE ABOVE WARRANTY IS MADE WITH REGARD TO THIS PRODUCT, ANY IMPLIED WARRANTIES OF SELLER REGARDING THIS PRODUCT INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED. BUYER'S OR USER'S REMEDIES ARE SOLELY AND EXCLUSIVELY AS STATED ABOVE. STAR ASIA-USA, LLC SHALL IN NO EVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, OR SPECIAL DAMAGES. IN NO EVENT, WHETHER AS A RESULT OF A BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, SHALL SELLER'S LIABILITY EXCEED THE PRICE OF THE PRODUCT WHICH HAS GIVEN RISE TO THE CLAIM OR LIABILITY. ANY LIABILITY CONNECTED WITH THE USE OF THIS PRODUCT SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIODS SPECIFIED ABOVE.

Limitations on Warranty Disclaimers

Any implied warranties shall be limited in duration to 90 days from the date of purchase. In some states of the U.S.A. and in some provinces of Canada there is no limitation for how long an implied warranty is valid, so the aforementioned limitation may not apply to you. In no event shall a seller be liable for any incidental or consequential damages (including but not limited to liability for loss of profits) arising from the sale or use of this product. In some states of the U.S.A. and in some provinces of Canada the exclusion or limitation of incidental or consequential damages is not allowed, so that aforementioned limitation or exclusion may not apply to you.

This Limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state in the U.S.A., Canada and the Commonwealth of Puerto Rico. For warranty coverage within other countries, contact your local star Asia-USA, LLC dealer or importer.

Distributed by Star Asia-USA, LLC
P.O. Box 58399, Renton, WA 98058
Consumer Service: 800-386-0191
e-mail: info@titan-us.com
©2020 Star Asia-USA, LLC

NOTES

NOTES

90 DAY LIMITED WARRANTY

Star Asia-USA, LLC (hereinafter "seller") warrants to the original purchaser only, that this product will be free from defects in material or workmanship for a period of 90 days from date of purchase for home domestic use.

Warranty Performance

Warranty coverage is conditioned upon purchaser furnishing seller or its authorized service center with adequate written proof of the original purchase date. Products returned, freight prepaid and insured, to our factory or to an Authorized Service Center will be inspected and repaired or replaced, at seller's option, free of charge if found to be defective and subject to warranty. Defective parts not subject to normal wear and tear will be repaired or replaced, at our option during the above stated warranty periods. In any event, reimbursement is limited to the purchase price paid. Other than the postage and insurance requirement, no charge will be made for repairs or replacements covered by this warranty. Under no circumstances shall the manufacturer bear any responsibility for loss of the unit, loss of time or rental, inconvenience, commercial loss or consequential damages. There are no warranties which extend beyond the description of the face hereof.

Exclusions

This warranty does not cover parts damaged due to normal wear, abnormal conditions, misapplication, misuse, abuse, accidents, operation at other than recommended pressures or temperatures, improper storage of freight damage. Parts damaged or worn by operation in dusty environments are not warranted. Failure to follow recommended operating and maintenance procedures also voids warranty. Additional items not covered under warranty: product failure caused by rain, excessive humidity, corrosive environments or other contaminants; cosmetic defects that do not interfere with product's functionality. This warranty shall not apply when: the product has been used for commercial or rental purposes; defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; this damage is due to abuse, improper maintenance, neglect or accident; or the damage is due to use of the product after partial failure or use with improper accessories. Warranty does not apply to accessory items. Seller will not be liable for: labor charges, loss or damage resulting from improper operation, maintenance or repairs made by persons other than a Star Asia-USA, LLC Authorized Service Center. The use of other than genuine Star Asia-USA, LLC repair parts will void warranty.

Warranty Disclaimers

NO WARRANTY, ORAL OR WRITTEN, OTHER THAN THE ABOVE WARRANTY IS MADE WITH REGARD TO THIS PRODUCT, ANY IMPLIED WARRANTIES OF SELLER REGARDING THIS PRODUCT INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED. BUYER'S OR USER'S REMEDIES ARE SOLELY AND EXCLUSIVELY AS STATED ABOVE. STAR ASIA-USA, LLC SHALL IN NO EVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, OR SPECIAL DAMAGES. IN NO EVENT, WHETHER AS A RESULT OF A BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, SHALL SELLER'S LIABILITY EXCEED THE PRICE OF THE PRODUCT WHICH HAS GIVEN RISE TO THE CLAIM OR LIABILITY. ANY LIABILITY CONNECTED WITH THE USE OF THIS PRODUCT SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIODS SPECIFIED ABOVE.

Limitations on Warranty Disclaimers

Any implied warranties shall be limited in duration to 90 days from the date of purchase. In some states of the U.S.A. and in some provinces of Canada there is no limitation for how long an implied warranty is valid, so the aforementioned limitation may not apply to you. In no event shall a seller be liable for any incidental or consequential damages (including but not limited to liability for loss of profits) arising from the sale or use of this product. In some states of the U.S.A. and in some provinces of Canada the exclusion or limitation of incidental or consequential damages is not allowed, so that aforementioned limitation or exclusion may not apply to you.

This Limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state in the U.S.A., Canada and the Commonwealth of Puerto Rico. For warranty coverage within other countries, contact your local star Asia-USA, LLC dealer or importer.

Distributed by Star Asia-USA, LLC
P.O. Box 58399, Renton, WA 98058
Consumer Service: 800-386-0191
e-mail: info@titan-us.com
©2020 Star Asia-USA, LLC

GARANTIE LIMITÉE DE 90 JOURS

Star Asia-USA, LLC (ci-après appelé « vendeur ») garantit à l'acheteur original seulement, que ce produit est exempt de défaut en matériel ou de fabrication pendant une période de 90 jours à compter de la date d'achat pour un usage domestique.

Garantie de rendement

La couverture de la garantie est déterminée par l'acheteur qui fournit au vendeur ou à son centre d'entretien autorisé une preuve adéquate de la date d'achat initiale. Les produits retournés, le fret payé d'avance et assuré, à notre usine ou à un centre d'entretien autorisé, seront inspectés et réparés ou remplacés, au choix du vendeur, sans frais s'il a été déterminé qu'ils sont défectueux et couverts par la garantie. Les pièces défectueuses ne faisant pas l'objet d'une usure normale seront réparées ou remplacées, à notre discrétion au cours des périodes de garantie mentionnées ci-dessus. Dans tous les cas, le remboursement est limité au prix d'achat payé. Autres que les frais de poste et les exigences d'assurance, aucuns frais ne seront chargés pour les réparations ou les remplacements couverts par cette garantie. Le fabricant n'assumera en aucun cas la responsabilité de la perte de l'unité, de toute perte de temps ou de la location, des inconvénients, de la perte commerciale ou tout autre dommage consécutif. Il n'y a aucune garantie qui s'étend au-delà de la description dans les présentes.

Exclusions

La présente garantie ne couvre pas les pièces endommagées par l'usure normale, les conditions anormales, l'application fautive, le mauvais usage, l'abus, les accidents, l'utilisation à d'autres pressions ou températures que celles recommandées, un mauvais entreposage ou les dommages liés au transport. Les pièces endommagées ou usées par une utilisation dans des milieux poussiéreux ne sont pas couvertes par la garantie. Le non-respect des procédures d'utilisation et d'entretien recommandées annule la garantie. Les articles supplémentaires suivants ne sont pas couverts par la présente garantie : panne du produit causée par la pluie, l'humidité excessive, des environnements corrosifs ou tout autre contaminant, des défauts cosmétiques qui n'affectent pas le fonctionnement du produit. La présente garantie ne s'applique pas quand : le produit a été utilisé à des fins commerciales ou de location; des défauts de matériaux ou de fabrication ou des dommages occasionnés par des réparations ou des modifications ont été réalisés ou tentés par d'autres personnes ou l'utilisation non autorisée de pièces non conformes; le dommage a été causé par un abus, un mauvais entretien, une négligence ou un accident ou le dommage est causé par l'utilisation du produit après une défaillance partielle ou une utilisation avec les mauvais accessoires. La garantie ne s'applique pas aux accessoires. Le vendeur n'est pas responsable : des frais de main-d'œuvre, de la perte ou de dommage occasionné par une mauvaise utilisation, de l'entretien ou des réparations réalisés par des personnes autres que par le centre d'entretien autorisé de Star Asia-USA, LLC. L'utilisation de pièces de réparation autres que les pièces authentiques de Star Asia-USA, LLC annulera la garantie.

Avis de non-responsabilité relatifs à la garantie

AUCUNE GARANTIE, ORALE OU ÉCRITE, AUTRE QUE CELLE CI-DESSUS N'EST DONNÉE EN CE QUI A TRAIT AU PRÉSENT PRODUIT. AUCUNE GARANTIE IMPLICITE DU VENDEUR EN LIEN AVEC CE PRODUIT Y COMPRIS MAIS SANS S'Y LIMITER, LES GARANTIES DE COMMERCIALITÉ OU DE BONNE CONDITION À DES FINS PARTICULIÈRES, SONT EXCLUES. LES RECOURS DE L'ACHETEUR OU DE L'USAGER SONT UNIQUEMENT ET EXCLUSIVEMENT MENTIONNÉS CI-DESSUS. STAR ASIA-USA, LLC NE SERA EN AUCUN CAS RESPONSABLE POUR TOUT DOMMAGE CONSÉCUTIF, ACCIDENTEL, INDIRECT OU SPÉCIAL. EN AUCUN CAS, QUE CE SOIT À LA SUITE D'UNE RUPTURE DE CONTRAT, DE GARANTIE, DE DÉLIT (Y COMPRIS LA NÉGLIGENCE) OU AUTREMENT, LA RESPONSABILITÉ DU VENDEUR NE SURPASSERA LE PRIX DU PRODUIT AYANT DONNÉ LIEU À LA RÉCLAMATION OU LA RESPONSABILITÉ. TOUTE RESPONSABILITÉ EN LIEN À L'UTILISATION DE CE PRODUIT PRENDRA FIN À L'EXPIRATION DES PÉRIODES DE GARANTIE SPÉCIFIÉES DANS LA PRÉSENTE.

Limites des avis de non-responsabilité relatifs à la garantie

La durée de toute garantie implicite doit se limiter à un an de la date d'achat. Dans certains états des É.-U. et dans certaines provinces du Canada, il n'y a aucune limite de temps pour qu'une garantie implicite soit valide, par conséquent la limitation susmentionnée pourrait ne pas s'appliquer à votre situation. En aucun cas le vendeur ne sera tenu responsable des dommages accidentels ou consécutifs (y compris, mais sans s'y limiter, la perte de profits) survenus suite à la vente ou à l'utilisation du présent produit. Dans certains états des É.-U. et dans certaines provinces du Canada, l'exclusion ou la limitation de dommages accidentels ou consécutifs n'est pas permise, par conséquent la limitation susmentionnée pourrait ne pas s'appliquer à votre situation.

La garantie limitée vous donne des droits légaux spécifiques, et vous pourriez avoir d'autres droits qui varient d'un état à l'autre aux É.-U., d'une province à l'autre au Canada et au sein du Commonwealth de Porto Rico. Pour les couvertures de garantie dans d'autres pays, veuillez communiquer avec votre concessionnaire ou votre importateur local de Star Asia-USA, LLC.

Distribué par Star Asia-USA, LLC
P.O. Box 58399, Renton, WA 98058 É.-U.
Service à la clientèle : 1-800-386-0191
adresse courriel : info@titan-us.com
©2019 Star Asia-USA, LLC

