 


ZYW016-S20

ZYW016-S30

Rtractable Hose Reel

Instruction Manual

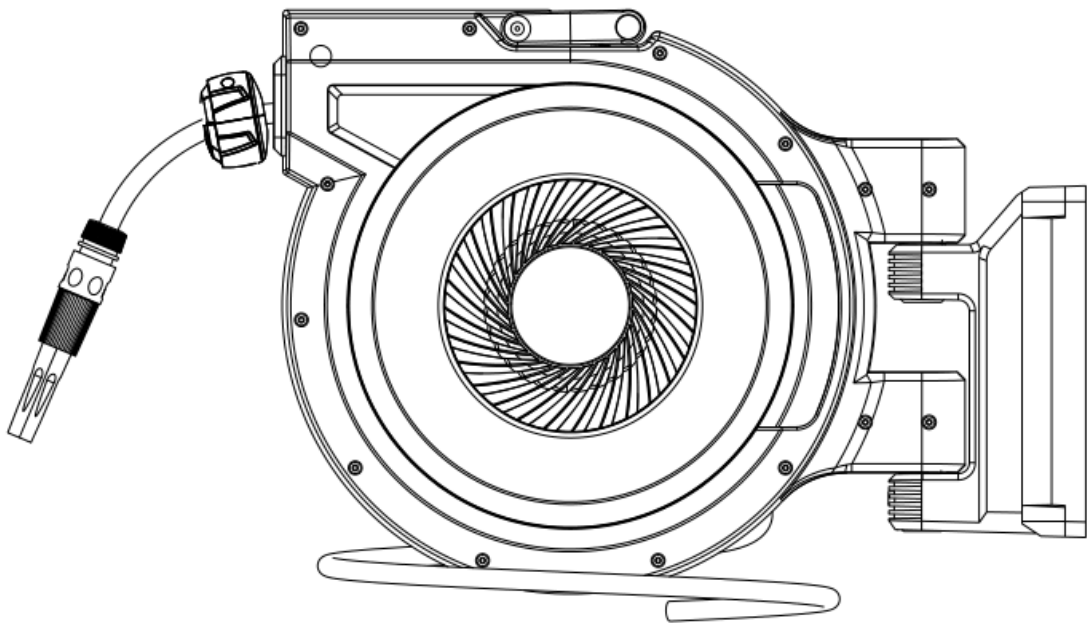

Please read these operating instructions carefully and note the information given. Use these operating instructions to familiarize yourself with the product, the proper use and the safety instructions.


Correct use:

The Hose reel is provided with auto rewind system and intended for use in the private home and hobby garden or car washing etc.

NOTE: The item cannot be used for drinking water as well as harmful air of causticity, chemistry, grease or poisonous liquid.

Please hold the hose stop ball when the hose retracts.

Parts list:

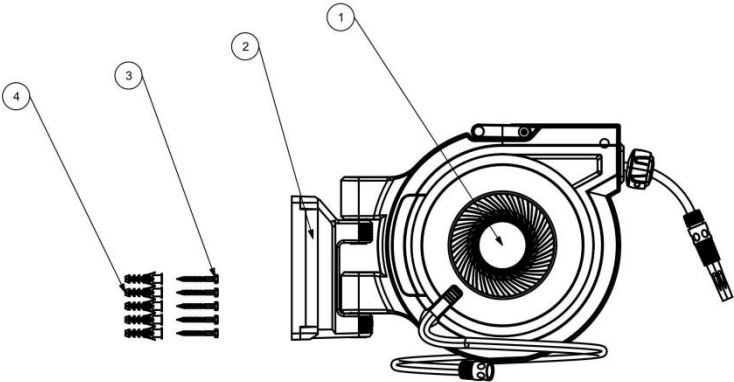N o	Description	Quantity	Picture
1	Hose reel	1	
2	Mounting bracket	1	
3	Self-tapping screws	5	
4	Plastic dowel	5	

Installation:

1. Take out the unit and accessories from the box.
2. Choose a suitable place near source of water.
3. Take the mounting bracket as a template to mark the position for screws and drill four holes(12mm*60mm) on the wall(Fig.2)

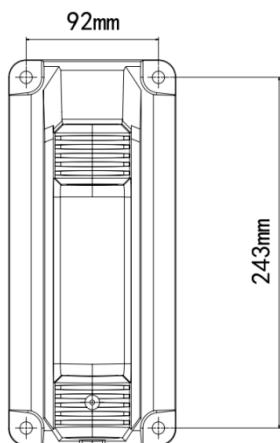


Fig.1

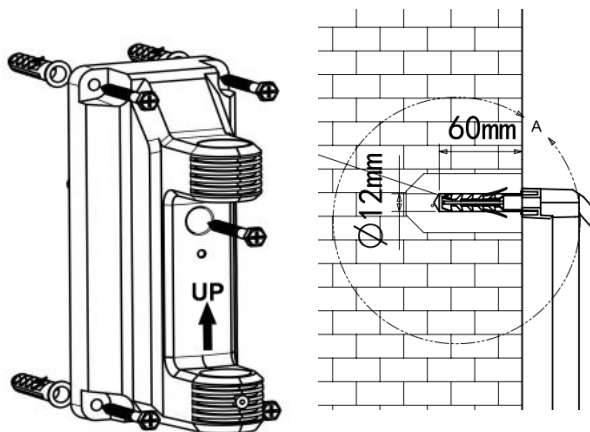


Fig.2

4. Fix the bracket by four self-taping screws accordingly. (Fig.2)
5. Connect the reel to the mounting bracket.(Fig.3)(Fig.4)

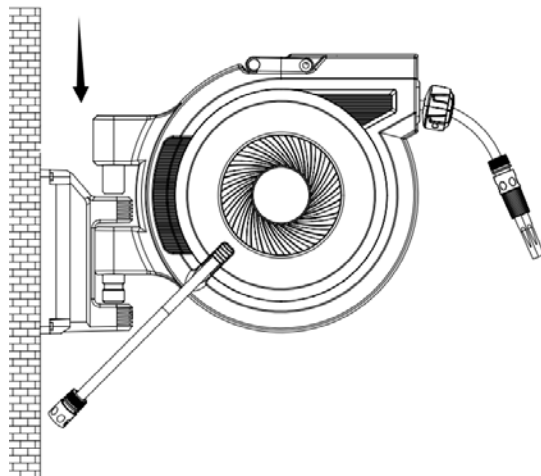


Fig.3

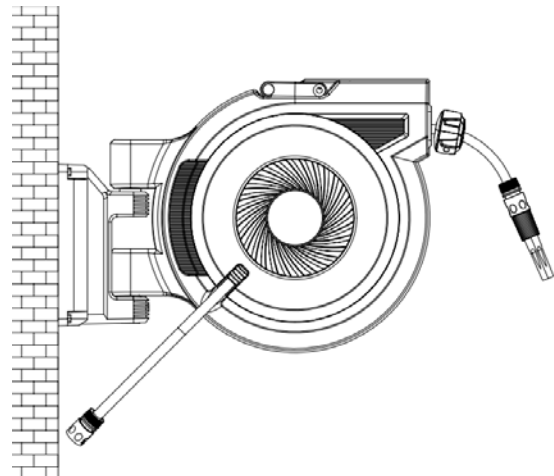


Fig.4

- Note:** 1. The reel should be installed to a wall or post horizontally.
2. It is suggested to mount the reel approximately 1 meter above the ground.

Operation

Connect the leader hose to the water source, then turn on the tap.

Unwind

- Pull out hose to desired length and stop anywhere.

Roll up the hose

- With the end of the hose, go back to the Hose Box.
- Turn off the faucet, loosen the connector of lead hose

Storage

Cleaning

The hose box is maintenance-free and must not be cleaned internally with water.

Maintenance

- When not in use, please turn off the source of water, and turn on the nozzle to release the pressure
- The reel can not be used to transmit any chemical and substance
- When not in use for an extended period of time it is recommended to be stored in a cool dry place.

Troubleshooting

Default	Reason	Solution
The hose could not retract	Hoses stacked on top of each other	Pull out all of the hose and let it go back to housing slowly with your hands grabbing it.
	Spring is fatigued	Please re-preload the spring for 1-2 turns: remove the small cover, use spanner to clamp the groove of preload wheel, unscrew four bolts on the wheel, then rotate it for 1-2 turns in clockwise, then fasten the bolts, and replace the cover.Fig.5

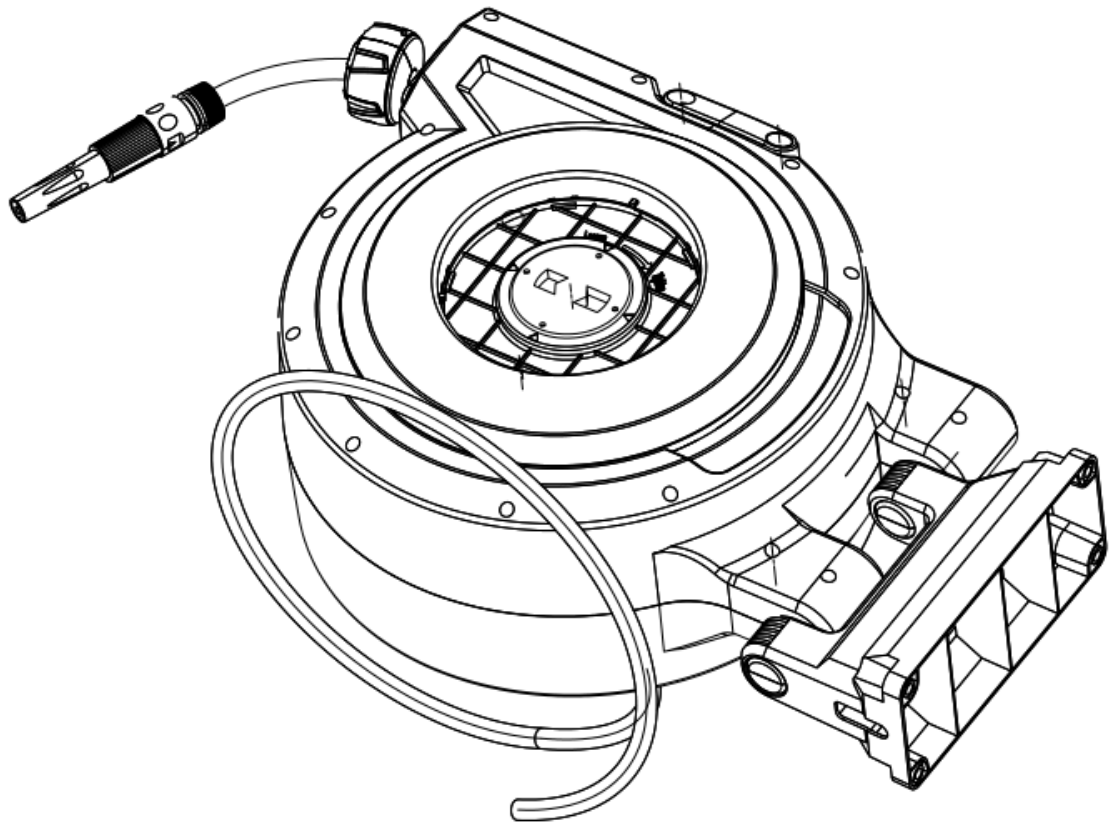 


Fig.5