



HEATED SNOWPLOW HEADLAMP

W/ TURN INDICATOR, WARNING & FOG LAMPS

INSTRUCTION MANUAL



(Shown with fog lamp installed)



⚠ WARNING

**READ AND UNDERSTAND THIS INSTRUCTION MANUAL
PRIOR TO USING THIS PRODUCT. FAILURE TO DO SO MAY
RESULT IN SERIOUS INJURY OR DEATH.**

Keep this instruction manual for future reference.

This instruction manual is intended for your benefit. Please read and follow the safety, installation, maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

The safety instructions provided in this manual are not intended to cover all possible conditions and practices that may occur when operating, maintaining and cleaning power equipment.

Always use common sense and pay particular attention to all the DANGER, WARNING, CAUTION and NOTICE statements in this manual.

WARNING SYMBOLS AND DEFINITIONS	
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	Addresses practices not related to personal injury.
CAUTION	

Symbols used in this manual and/or the label on your tool may include the following symbols. The symbols and their definitions are as follows:

Symbol	Property or Statement
A	Current, in Amperes
	Direct Current (DC)
	Earthing Terminal
V	Voltage, in Volts
	Read and understand this instruction manual prior to using this product.
	Wear ANSI approved (or applicable national standard) goggles or properly fitted protective glasses with top and side protection.
	Keep Out of Reach of Children

Symbol	Property or Statement
	Burn Hazard
	Shock Hazard
	Fire Hazard
	Do Not Dispose of in Household Waste

INTENDED USE

 **WARNING** For off-road application only; not intended to be used in place of vehicle's standard lights or headlights.

The rugged Northern Ridge™ heated Snowplow headlamp w/ Turn Indicator, Warning & Fog Lamps complements your vehicle while providing both additional light and safety.

Intended to be mounted on vehicles for off-road use and used as a forward lamp when snow-plowing, the Main Headlamp consists of 2 LEDs for High/Low beams, and 18 bi-color white/amber LEDs used for the Position, Warning, and Turn Indicators. The separate Turning Lamp has 10 Amber LEDs, while the separate Warning Lamp has 32 Amber LEDs. When used optionally, the Fog Lamp is mounted instead of the Warning Lamp and has 3 white LEDs.

The Main Headlamp is heated to help prevent ice and slush build-up on the front of the lamp during the plowing process. Along with this anti-freezing function, the powerful LED headlamp and warning lamp improves visibility for the operator and improves safety by alerting other drivers. Optionally using the Fog Lamp instead of the Warning Lamp will also improve visibility.

The light has an IP67 rating, which means the sealed die-cast aluminum housing protects against dust and temporary water immersion and is for use in extreme weather conditions.


The simple mounting pre-wired connectors make installation to either a 12V or 24V system easy. Each function, high beam, low beam, amber position/indicator, fog light, and heated headlamp is wired on a separate circuit, allowing them to be connected to a separate switch for independent control, if desired.

SPECIFICATIONS


Specification	Value
Description:	Heated Snowplow Headlamp w/Turn Indicator, Warning and Fog Lamp
Housing Color:	Black Powder Coat
Housing Material:	Die-cast Aluminum Alloy
Lens Material:	Impact Resistant Polycarbonate
Hardware Mat'l:	Aluminum, S. Steel, Silicone
Beam Types:	Combination driving (High & Low Beam), Fog, Position, and Warning
Bulb Type (ea):	Hi Beam: 1 LED Low Beam: 1 LED White/Amber Position: 18 LEDs Fog: 3 LEDs Warning Light: 32 LEDs Turn Indicator: 10 LEDs
Average Lifespan:	50,000 Hours
Beam Angle:	20° (Hi Beam / Lo Beam)



Specification	Value
Voltage:	10 to 30 V DC
Nominal Power:	Hi Beam: 34 W Low Beam: 17W White/Amber Position: 5W Fog: 11W Warning Light: 7W Turn Indicator: 15W
Power Consumption:	Headlamp: 12V 2.86A / 24V 1.43A Warning Lamp: 12V 1.21A / 24V 0.61A Turn Indicator: 12V 1.61A / 24V 0.81A Fog Lamp: 12V 1.13A / 24V 0.57A
Projected Distance:	Lo Beam: 531 ft (162 m) Hi Beam: 787 ft (240 m)
Light Intensity:	Lo Beam: 1,500Lx(Theo.) / 1,200Lx (Eff.) Hi Beam: 2,800Lx(Theo.) / 2,200Lx (Eff.)
Color Temperature:	6,000 K (White) / 3,000 K (Amber)
Ingress Protection:	IP67 Rated
EM Compatibility:	ECE R10 Compliant
Compliance:	DOT Compliant

BEAM-SURFACE CONTOUR MAP - LOW BEAM

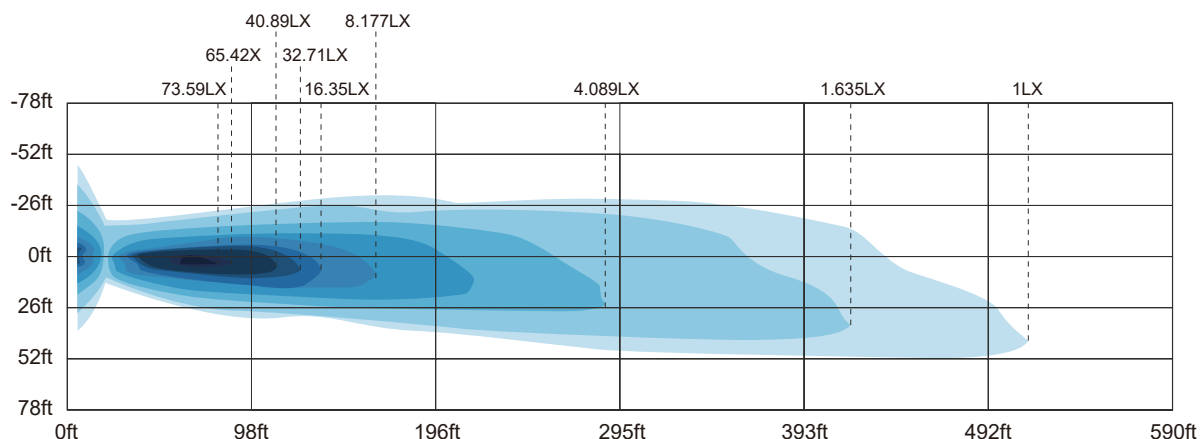

BEAM-SURFACE CONTOUR MAP - HIGH BEAM

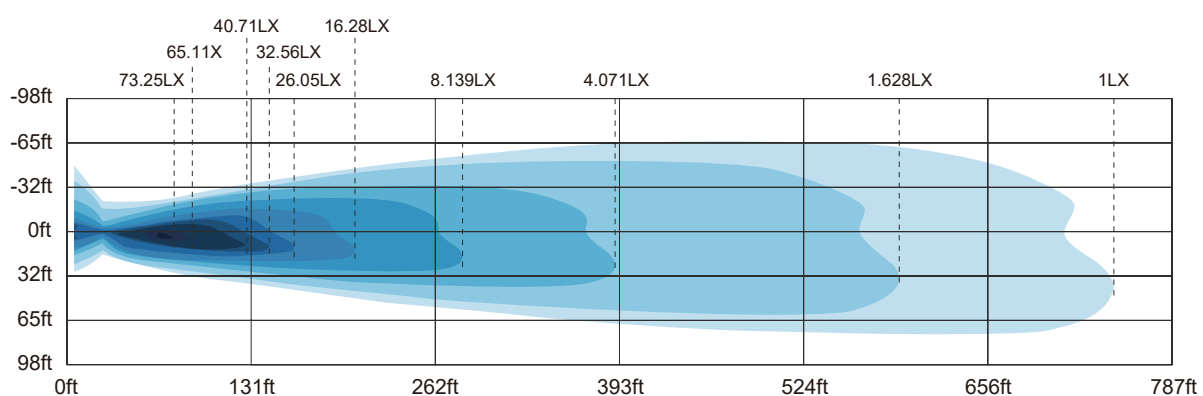

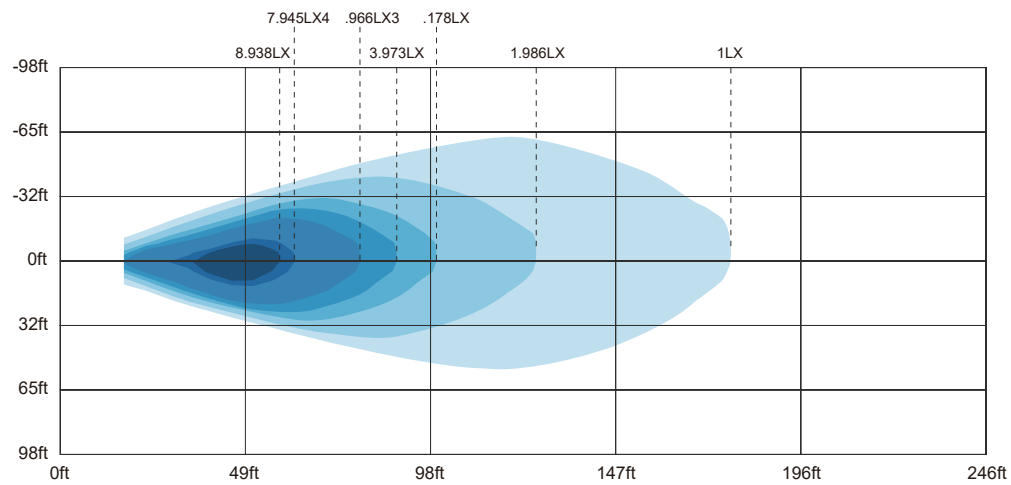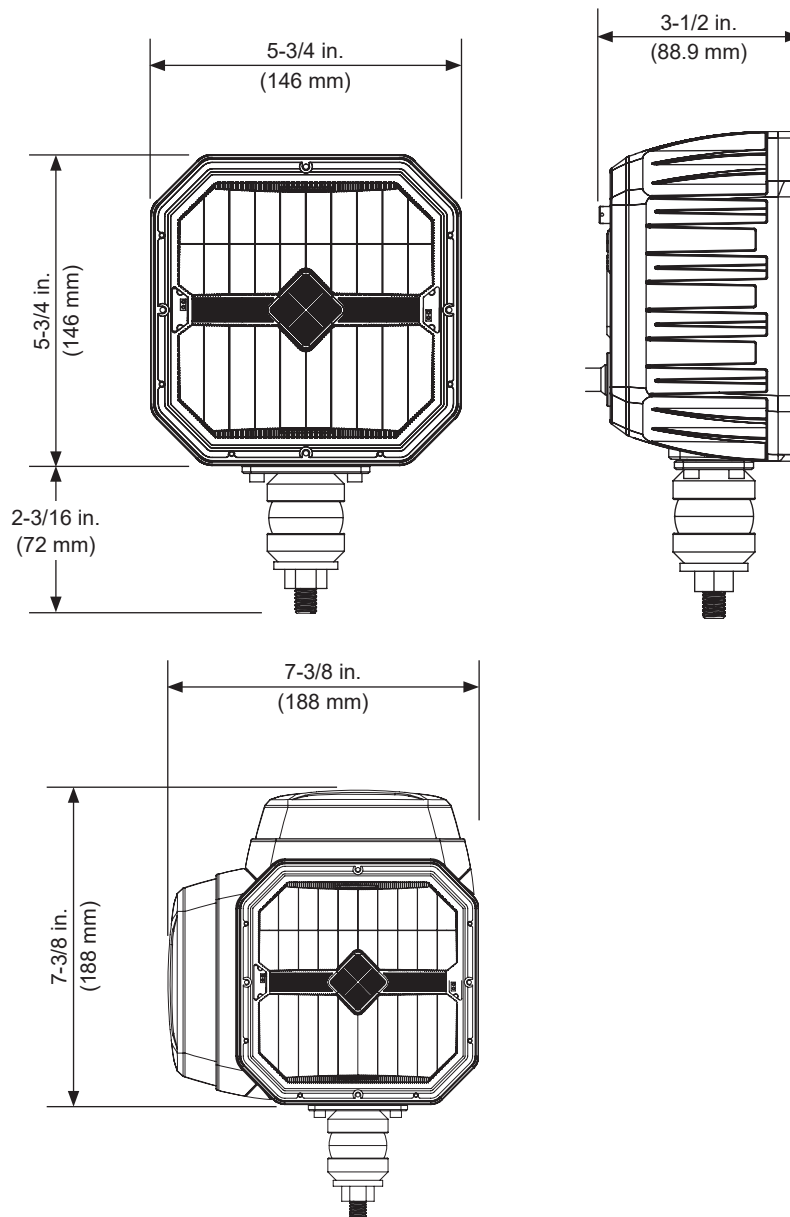BEAM-SURFACE CONTOUR MAP - FOG LAMP**SIZE**

UNPACKING & INSPECTION

When unpacking, please inspect the product carefully to ensure the product is intact and undamaged. If any parts are missing or broken, please call 1-800-386-0191 as soon as possible.



WARNING


Do not use this product if damaged during shipment, handling, or after misuse.

Do not use the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage.

Remove the parts and accessories from the packaging and inspect for damage. Make sure that all items in the contents are included.

Package contents :

A - LED Heated Headlight (1 pc)	E - Lamp Molding (3 pcs)	J - Carriage Bolt (1 pc)
B - Turn Indicator (1 pc)	F - Baseplate (1 pc)	K - Nut (1 pc)
C - Warning Light (1 pc)	G - Baseplate Gasket (1 pc)	L - Washers (2 pcs)
D - Fog Light (1 pc)	H - Panhead Screw (3 pcs)	M - Half Sphere Swivel (2 pcs)
	I - Socket Head Capscrew (8 pcs)	N - Swivel Cup (2 pcs)

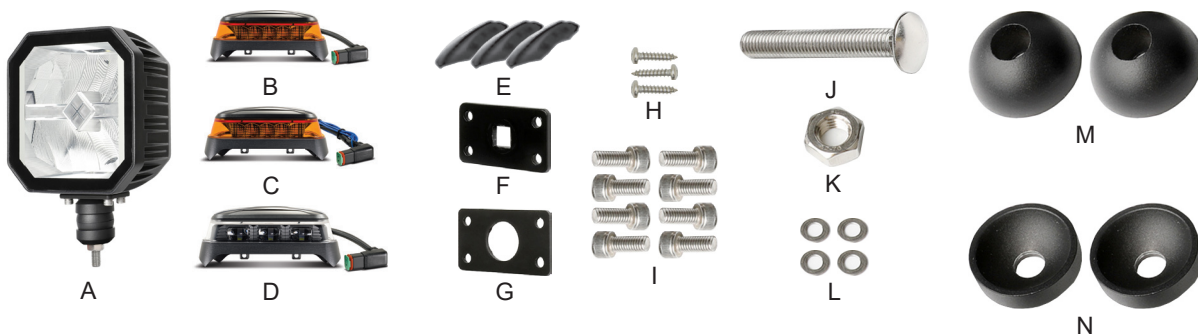

GENERAL SAFETY RULES



WARNING

READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS. Failure to follow the warnings and instructions may result in electric shock, serious injury and/or DEATH.

Save this instruction manual for future reference.



WARNING

HEADLIGHTS THAT ARE INSTALLED INCORRECTLY CAN BE VERY DANGEROUS.

Incorrect assembly or installation may result in *serious injury and/or DEATH*. If you do not feel completely comfortable or confident in assembling or installing, seek the services of a competent and qualified technician to assemble and install the headlight(s) for you.

WORK AREA SAFETY

- **Keep your work area clean, well-lit and free of distractions.** Place lights so you are not working in a shadow.
- **Use the right tool or attachment for the job.** There are certain applications for which this product was designed. Do not modify this product, and do not use this product for purposes for which it was not intended.
- **Do not operate this product in explosive atmospheres,** such as in the presence of flammable liquids, gases or dust. This product may create sparks which may ignite the dust or fumes.
- **Keep anyone not wearing appropriate safety equipment away from the work area.**
- **If working alone, always arrange to have someone check on you at pre-arranged, regular intervals.**

PERSONAL SAFETY

- **Wear Personal Protective Equipment (PPE) approved by the American National Standards Institute (ANSI) or the Canadian Standards Association (CSA).**
- **Always wear impact safety goggles or eyewear that provide front and side protection for the eyes.** Eye protection equipment should comply with ANSI Z87.1 or CSA Z94.3-07 standards based on the type of work performed.
- **Keep children and bystanders away while working.** Distractions can cause you to lose control.
- **Control the tool, personal movement and the work environment** to avoid personal injury or damage to the equipment.
- **Do not overreach.** Non-skid footwear is recommended to maintain proper footing and balance to enable better control in unexpected situations.
- **Stay alert, watch what you are doing and use common sense when using tools. Do not assemble and install this product while you are tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while working may result in serious personal injury.
- **Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- **Do not let familiarity gained from frequent use allow you to become complacent and ignore safety principles.** A careless action can cause severe injury within a fraction of a second.

SPECIFIC SAFETY WARNINGS

! WARNING

This product is not intended for use by persons (including children) whose physical, sensory, or mental capabilities are different or reduced, or lack experience or knowledge, unless such persons receive supervision or training in the operation of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not use the device as a toy.

! WARNING

- Read all instructions and safety precautions in the vehicle's manual onto which the LED Light will be installed.
- Do not install this product in any way that interferes with the deployment of air bags. Vehicles equipped with airbags may have the sensors located inside the front bumper. Make sure to consult the vehicle service manual to determine the location of the airbag sensors.
- Select a mounting location that will not restrict sufficient airflow to the engine coolant or oil radiator or where it may obstruct headlights or turn signals of the vehicle.
- Clean mounting surfaces before installation using water, and if necessary, a 50/50 mix of water and isopropyl alcohol.
- The LED Light is for OFF-ROAD use only. Follow local, state, and federal regulations regarding installation and use of this product on your vehicle.

- Use only as intended. Not for marine use. Do not mount underwater.
- During continuous operation lighting units can become extremely hot - Do not touch while operational or within 30 minutes of turning off. Do not place anything flammable near the light during or after use. Keep the light and charging cord away from hot surfaces and moving parts.
- AVOID EYE INJURY - Do not look directly into light as it may cause serious eye injury.
- To prevent damage, turn light off before starting or turning off the vehicle.
- Prior to performing any inspection, maintenance, or cleaning on the unit, turn off the LED Light, disconnect its power cord from its 12 Volt DC battery, and allow it to completely cool down.
- Inspect before every use; do not use if parts are loose or damaged.

NOTICE

Save these instructions.

Refer to these instructions frequently and use them to instruct others who may use this product. If you loan someone this product, be sure to also include these instructions.

Maintain labels. These carry important information. If unreadable or missing, contact Star Asia-USA, LLC for a free replacement.



**FOR OFF-ROAD APPLICATION ONLY.
NOT INTENDED TO BE USED IN
PLACE OF VEHICLE'S STANDARD
LIGHTS/HEADLIGHTS.**

INSTALLATION

! WARNING

Connect the wires with the correct polarity to avoid fire or personal injury.

! WARNING

Disconnect the negative (-) terminal of the vehicle battery prior to installing the LED Light.

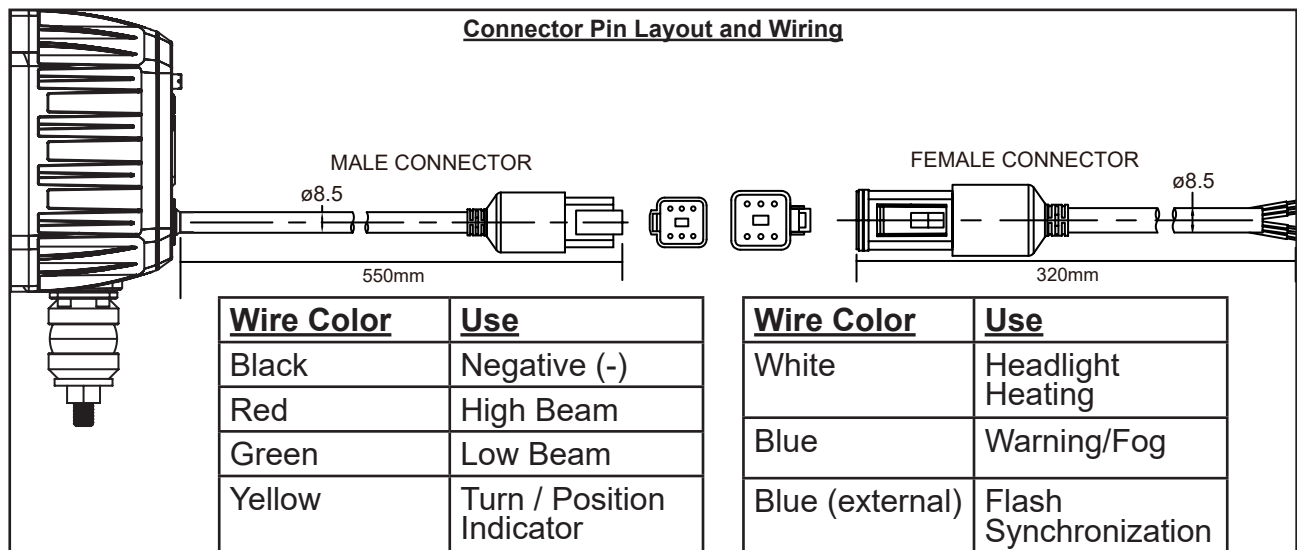


Fig. 7

Letters in parenthesis (A) refer to the items listed under “Package Contents”.

Remove the unit and included hardware from the package.

Determine Your Configuration

The headlight includes a fog light (white), warning light (flashing amber), and turn indicator light (amber). Normally, two of these three can be connected to the headlight at one time. Adding the third will require a separate wiring which will not be covered in this manual.



If you do not feel completely comfortable installing and wiring, or if you are unsure about the installation and wiring instructions, seek the services of a qualified technician.

A common configuration is to mount the fog light at the top of the headlight, and either the warning light or turn indicator light to one side. **NOTE: The fog and warning light configuration will be used as an example in these instructions.**

The mounting bracket, carriage bolt, and swivel can be installed at the bottom or the rear of the headlight. The images and example in these instructions will show the bracket mounted at the bottom.

A six conductor cable is recommended for connecting the headlight pigtail. Use a conductor no smaller than 18 gauge, and choose the correct gauge depending on the length required for wiring your setup:

Automotive Wire Size	Maximum Length
18 Gauge Wire	7 ft
16 Gauge Wire	11 ft
14 Gauge Wire	18 ft
12 Gauge Wire	28 ft
10 Gauge Wire	45 ft
<i>Based on 12V circuit for a single headlight. For each additional headlight, divide the max. length by the total number of headlights that are being installed if only one cable is used. For 24V circuit, multiply max. length by 2.</i>	

Assemble the Headlight

1. Lay out the Headlight (A), Fog Light (D), Warning Light (C) (or Turn Indicator Light (B), see **NOTE** under the section “Determining Your Configuration”), and other hardware on a clean flat surface.
2. On the light that you have determined to be at the top of the headlight (in this example, the Fog Light (D) will be described), install two Lamp Molding pieces (E) to the bottom of the Fog Light (D) using one Panhead Screw (H) to secure each piece.
3. Place a Socket Head Capscrew (I) through each of the two holes at the bottom of the Fog Light (D) so the threaded side is opposite of the access gaps and cord at the back of the light.
4. Align the Fog Light (D) to the top of the Headlight (A) and secure the Fog Light (D) to the headlight housing by tightening the two capscrews.
5. On the light that you have determined to be at the side of the headlight (in this example, the Warning Light (C) will be described), install one Lamp Molding piece (E) to the side of the Warning Light (C) that will be on the bottom of the headlight, depending on if you will mount it on the left side or right side. Use one Panhead Screw (H) to secure the molding in place.
6. Place a Socket Head Capscrew (I) through each of the

two holes at the bottom of the Warning Light (C) so the threaded side is opposite of the access gaps and cord at the back of the light.

7. Align the Warning Light (C) to the desired side of the Headlight (A) and secure the Warning Light (C) to the headlight housing by tightening the two capscrews.
8. Plug the cable from the Fog Light (D) into the port on the Headlight (A) housing marked “W/F” (Fig. 8). Note that the blue wire from the 6 conductor cable controls the port labeled “W/F”.
9. Plug the cable from the Warning Light (C) into the port on the Headlight (A) housing marked “T” (Fig. 8). Note that the yellow wire from the 6 conductor cable controls the port labeled “T”.

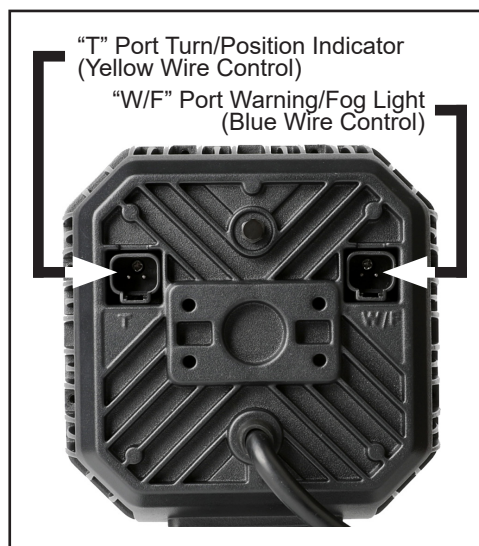


Fig.8

10. Assemble the Baseplate (F) to the Headlight (A) by first placing the Baseplate Gasket (G) onto the Baseplate (F), then inserting four Socket Head Capscrews (I) with Washers (L) through the Baseplate (F) and Baseplate Gasket (G) with the fastener head on the side of the Baseplate. Insert the Carriage Bolt (J) through the Baseplate (J) from the side with the Baseplate Gasket (G). Place the Baseplate (F) onto the Headlight (A) housing and secure in place by tightening the four Socket Head Capscrews (F). **NOTE:** There are two bosses available for mounting the baseplate, one on the bottom of the headlight and another at the back of the headlight.

Install the Headlight on a Vehicle



WARNING Proper installation of this product requires a good working knowledge of automotive electrical systems. If you have any doubts about the proper installation of this product, have a qualified technician install it. Neither the manufacturer nor the retailer is responsible for any damage, personal or property, incurred during installation or caused by improper installation.

1. Select a Mounting Location:
Selection of an acceptable mounting location will ensure proper operation and a long service life. When considering a mounting location, attention should be given to the following:
 - Select a mounting location that will not restrict

sufficient airflow to the engine coolant or oil radiator or where it may obstruct headlights or turn signals of the vehicle.

- The LED Light should be mounted on a flat surface that will allow easy access to inspect or adjust when necessary.
- Try to locate the LED Light where there is nothing in front that may block the light beam, including the driver or passenger.
- Ensure the mounting bolt is long enough for mounting the LED Light. Remember to add the additional length of the two Swivel Cups (N) and two Half Sphere Swivels (M). If the bolt is not long enough, it will be necessary to separately purchase a longer carriage bolt. If the carriage bolt is too long, replace the carriage bolt with a shorter carriage bolt.
- Avoid heat sources such as the engine exhaust, radiator, and engine block.
- Avoid placing near any moving parts of the vehicle such as doors, windows, seats, etc.
- Do not mount the LED Light where flammable liquids are stored, such as a fuel tank.
- Ensure all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. If drilling is required, check all sides of the mounting surface for any hidden electrical lines or cables before drilling any holes. Do not damage or weaken the structural integrity of the vehicle.

NOTICE

Spend some time to consider the best installation location and the position of the Led Light BEFORE drilling any mounting holes. Keep in mind the location and routing of the control switch(es) and wiring (not included).

WARNING

Do not install this product in any way that interferes with the deployment of air bags. Vehicles equipped with airbags may have the sensors located inside the bumpers. Make sure to consult the vehicle service manual to determine the location of the airbag sensors. To avoid damaging the sensors if they are located in the bumpers, do not drill holes in the bumpers.

2. Measure and mark a hole at the location where the light is to be installed and use a center punch to make a dimple for the drill bit.
3. Drill the mounting hole with an appropriately sized drill bit then remove any burrs and sharp edges on the

mounting hole.

4. With the Carriage Bolt (J) in the Baseplate (F), place a Swivel Cup (N), with the cup portion away from the headlight, the two Half Sphere Swivels (M) forming a sphere, and the second Swivel Cup (N) with the cup portion towards the Half Sphere Swivel (M) onto the Carriage Bolt (J).
5. Insert the Carriage Bolt (J) through the drilled hole on the mounting surface, then secure in place by installing and tightening the Nut (K).
6. Route any installed wires to avoid heat sources, sharp edges, and moving parts. Use plastic cable ties to secure the wire.
7. Connect the LED Light to the wiring harness and/or switch (not included) using an appropriate method such as crimped wiring terminals or soldering. Be sure to waterproof the connections.

CAUTION

- **Do not splice into a random wire under the hood** as this may interrupt the vehicle on-board computer.
 - Waterproof all wiring connections using heat shrink terminals, heat shrink tubing, electrical tape, or other appropriate methods (not included).
 - Before reconnecting the battery, ensure that the switch is in the OFF position.
 - Use plastic cable ties (not included) to secure wiring throughout the vehicle.
 - Avoid hot areas, hot surfaces, and moving parts when routing wires.
 - Protect wiring from sharp edges with electrical tape, grommets, cable wrap or other appropriate means (not included).
 - Seal any holes made in the firewall to prevent water leakage and/or rust.
8. Adjust the beam of the LED Light so that it will illuminate the desired area. Loosen the Nut (K) on the Carriage Bolt (J) and adjust so the light beam is approximately 3 to 5 yards (3 to 5m) in front of the vehicle, then tighten the Nut (K).

WARNING

The use of this or any other warning device does not ensure all drivers can or will observe or react to an emergency warning signal. Never take the right-of-way for granted. It is the vehicle operator's responsibility to be sure they can proceed safely before entering an intersection, drive against traffic, respond at a high rate of speed, or walk on or around traffic lanes.

MAINTENANCE

WARNING

Always unplug the LED Light from its DC power source and allow the unit to completely cool down before performing any inspection or maintenance.

BEFORE EACH USE, inspect the general condition of the LED Light. Check for misalignment or binding of moving parts, cracked or broken parts, damaged wiring, damaged lens, and any other condition that may affect its safe operation. If a problem occurs with the Light, correct the problem before further use. Do not use damaged equipment. Inspect for:

- Loose fasteners
- Misalignment

- Binding of moving parts
- Damaged wiring
- Improper mounting
- Cracked or broken parts, and any other condition that may affect its safe operation.

If abnormal noise or vibration occurs while driving, or if the headlights stop working, **stop the vehicle** and correct the problem before further use. Do not use a damaged headlight. Tag damaged unit "DO NOT USE" until repaired by a qualified service technician.

CLEANING:**CAUTION**

Use only mild soap and a damp cloth to clean your LED Light since certain cleaning agents and solvents are harmful to plastics and aluminum parts. Some of these include: gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia, and household detergents containing ammonia.

TROUBLESHOOTING:

SYMPTOM	LIKELY CAUSE(S)
Light doesn't light up.	1. Power switch is in the OFF position. 2. Wiring connections are loose. 3. Wiring is damaged or corroded. 4. Wires are not connected according to the correct polarity 5. Fuse is blown.

DISPOSAL:

Recycle at the appropriate facility.

Contact your local municipality for a list of disposal facilities or by-laws for electronic devices, batteries, oil or other toxic liquids.

IMPORTANT! DO NOT pollute the environment by allowing uncontrolled discharge of waste oil.

NOTICE**Save these instructions.**

Refer to these instructions frequently and use them to instruct others who may use this product. If you loan someone this product, be sure to also include these instructions.

Maintain labels. These carry important information. If unreadable or missing, contact Star Asia-USA, LLC for a free replacement.




FOR OFF-ROAD APPLICATION ONLY. NOT INTENDED TO BE USED IN PLACE OF VEHICLE'S STANDARD LIGHTS/HEADLIGHTS.


HEADLIGHT ADJUSTMENT

This adjustment procedure is for reference only. Always refer to the procedure in your vehicle repair or service manual.


1. Start by moving the vehicle onto a flat surface with the headlights about 2 ft (60 cm) from a wall. Ensure there is enough space behind the vehicle to back up 25 ft (7.5 m) in a straight line.

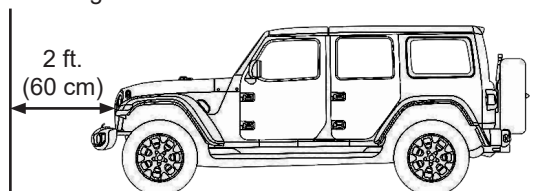


2. Use painter's tape to mark the centerline of the vehicle vertically on the wall.

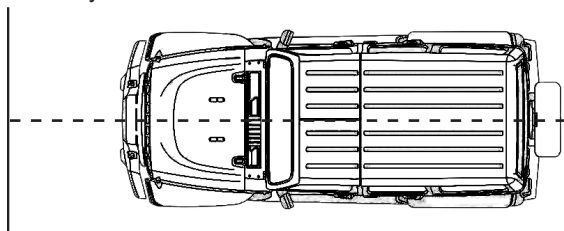


3. Turn the lights on and ensure the low beam lights are on. Adjust each light, left to right, so the distance from the centerline to the brightest point on each headlight's beam is the same (α) and that the total distance between the two lights ($2 \times \alpha$) is the same as the distance between the headlights and no larger than the width of the vehicle. Using painter's tape laid out vertically, mark the position on the wall of the brightest point on each headlight's beam.

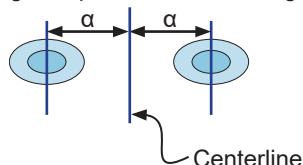


4. Mark a horizontal line on the wall, between the two beam marks made in step 3. The height of this line (β) should be the same as the distance as the height of the headlamp to the ground, and no more than 3-1/2 ft. (1 m). Use a level to ensure the line is horizontal.

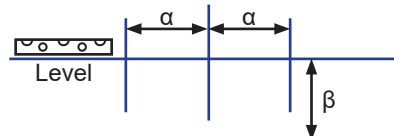

5. Back up the vehicle exactly 25 ft (7.5 m) from the wall. Use a tape measure to ensure the correct distance. Note: Although 25 ft is the most common distance, some vehicles recommend different distances for proper adjustment. Always defer to the specifications listed in your vehicle's repair/service manual.

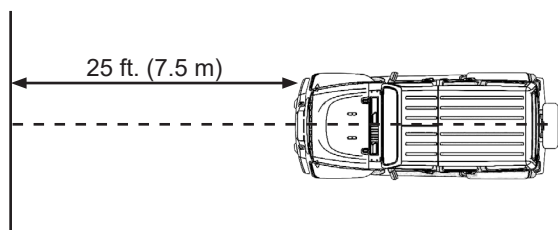

6. Adjust one headlight at a time by covering the other headlight. Adjust the headlight so the brightest part of the beam is centered on the cross made between the horizontal and the vertical marked lines.

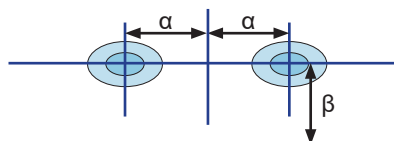

7. Test the alignment of the lights at night on a road with no traffic. Re-adjust as necessary.

[illegible]

NOTES

90 DAY LIMITED WARRANTY

Star Asia-USA, LLC (hereinafter "seller") warrants to the original purchaser only, that this product will be free from defects in material or workmanship for a period of 90 days from date of purchase for home domestic use.

Warranty Performance

Warranty coverage is conditioned upon purchaser furnishing seller or its authorized service center with adequate written proof of the original purchase date. Products returned, freight prepaid and insured, to our factory or to an Authorized Service Center will be inspected and repaired or replaced, at seller's option, free of charge if found to be defective and subject to warranty. Defective parts not subject to normal wear and tear will be repaired or replaced, at our option during the above stated warranty periods. In any event, reimbursement is limited to the purchase price paid. Other than the postage and insurance requirement, no charge will be made for repairs or replacements covered by this warranty. Under no circumstances shall the manufacturer bear any responsibility for loss of the unit, loss of time or rental, inconvenience, commercial loss or consequential damages, There are no warranties which extend beyond the description of the face hereof.

Exclusions

This warranty does not cover parts damaged due to normal wear, abnormal conditions, misapplication, misuse, abuse, accidents, operation at other than recommended pressures or temperatures, improper storage of freight damage. Parts damaged or worn by operation in dusty environments are not warranted. Failure to follow recommended operating and maintenance procedures also voids warranty. Additional items not covered under warranty: product failure caused by rain, excessive humidity, corrosive environments or other contaminants; cosmetic defects that do not interfere with product's functionality. This warranty shall not apply when: the product has been used for commercial or rental purposes; defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; this damage is due to abuse, improper maintenance, neglect or accident; or the damage is due to use of the product after partial failure or use with improper accessories. Warranty does not apply to accessory items. Seller will not be liable for: labor charges, loss or damage resulting from improper operation, maintenance or repairs made by persons other than a Star Asia-USA, LLC Authorized Service Center. The use of other than genuine Star Asia-USA, LLC repair parts will void warranty.

Warranty Disclaimers

NO WARRANTY, ORAL OR WRITTEN, OTHER THAN THE ABOVE WARRANTY IS MADE WITH REGARD TO THIS PRODUCT, ANY IMPLIED WARRANTIES OF SELLER REGARDING THIS PRODUCT INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED. BUYER'S OR USER'S REMEDIES ARE SOLELY AND EXCLUSIVELY AS STATED ABOVE. STAR ASIA-USA, LLC SHALL IN NO EVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, OR SPECIAL DAMAGES. IN NO EVENT, WHETHER AS A RESULT OF A BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, SHALL SELLER'S LIABILITY EXCEED THE PRICE OF THE PRODUCT WHICH HAS GIVEN RISE TO THE CLAIM OR LIABILITY. ANY LIABILITY CONNECTED WITH THE USE OF THIS PRODUCT SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIODS SPECIFIED ABOVE.

Limitations on Warranty Disclaimers

Any implied warranties shall be limited in duration to 90 days from the date of purchase. In some states of the U.S.A. and in some provinces of Canada there is no limitation for how long an implied warranty is valid, so the aforementioned limitation may not apply to you. In no event shall a seller be liable for any incidental or consequential damages (including but not limited to liability for loss of profits) arising from the sale or use of this product. In some states of the U.S.A. and in some provinces of Canada the exclusion or limitation of incidental or consequential damages is not allowed, so that aforementioned limitation or exclusion may not apply to you.

This Limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state in the U.S.A., Canada and the Commonwealth of Puerto Rico. For warranty coverage within other countries, contact your local star Asia-USA, LLC dealer or importer.