


TROUBLESHOOTING

Visit a Princess Auto Ltd. location for a solution if the tool does not function properly or parts are missing. If unable to do so, have a qualified technician service the tool.

PARTS BREAKDOWN

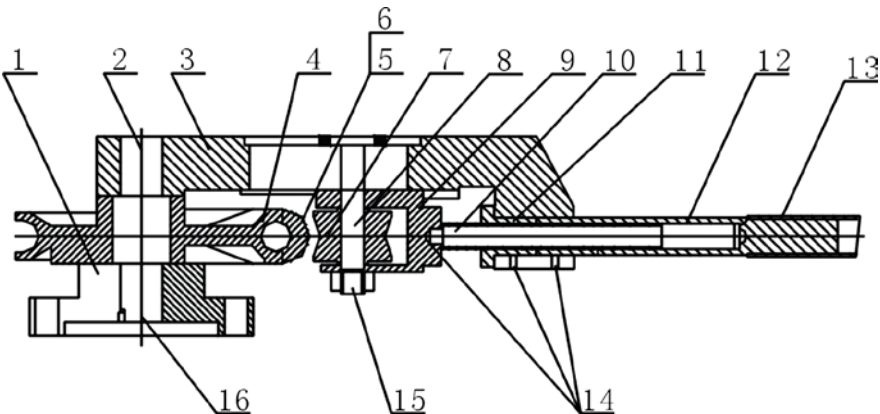

PARTS LIST


#	DESCRIPTION
1	Base
2	Axis Bolt
3	Bender Body
4	Die
5	Orientation Block
6	Bolt and Nut
7	Wheel
8	Wheel Bolt

9	Wheel Bracket
10	Adjustment Pole
11	Adjustment Screw
12	Handle
13	Grip
14	Locking Screw
15	Wheel Nut
16	Axis Bolt Base

DÉPANNAGE

Si l'outil ne fonctionne pas correctement ou si des pièces sont manquantes, visitez un magasin Princess Auto Ltd. afin de trouver une solution. Si ce n'est pas possible, demandez à un technicien qualifié de réparer l'outil.

RÉPARTITION DES PIÈCES

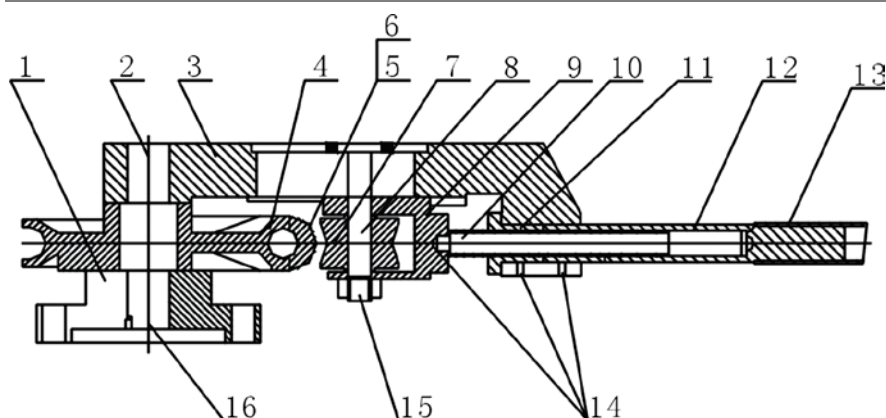

LISTE DES PIÈCES

N°	DESCRIPTION
1	Base
2	Boulon d'axe
3	Corps de cintreuse
4	Matrice
5	Bloc d'orientation
6	Boulon
7	Roue
8	Boulon de roue

9	Support de roues
10	Tige de réglage
11	Vis de réglage
12	Poignée
13	Prise
14	Vis de blocage
15	Écrou de roue
16	Base du boulon d'axe