


PARTS BREAKDOWN

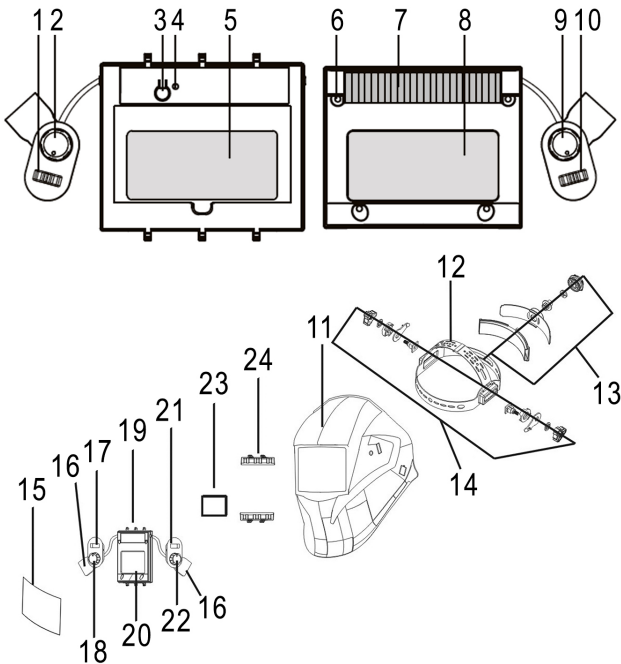


PARTS LIST

#	DESCRIPTION
1	Shade & Grind Switch Knob
2	Shade Knob
3	Self-Test Button
4	Low Volume Indicator
5	LCD
6	Arc Sensor
7	Solar Panel
8	UV/IR Filter
9	Sensitivity Control Knob
10	Delay Control Knob
11	Helmet Body
12	Headgear Top Adjustment

13	Headgear Tightness Adjusting Knob
14	Headgear Angle & Distance Adjusting Knob
15	Front Cover Lens
16	Battery Compartment
17	Delay Time Control
18	Sensitivity Control
19	Filter Cartridge
20	LCD
21	Weld & Grind Control
22	Variable Shade Control
23	Inside Cover Lens
24	Filter Fixture Holder

RÉPARTITION DES PIÈCES

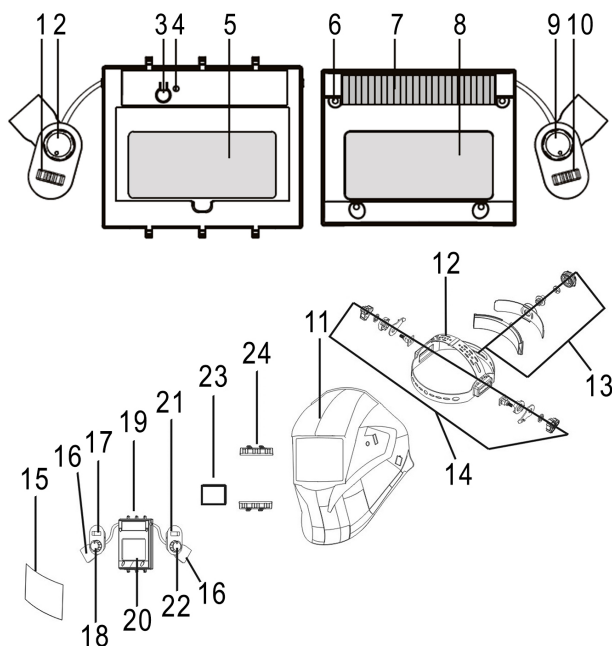

LISTE DES PIÈCES

N°	DESCRIPTION
1	Bouton sélecteur de teinte et meulage
2	Bouton de teinte
3	Bouton d'essai automatique
4	Indicateur de volume bas
5	ACL
6	Capteur d'arc
7	Panneau solaire
8	Filtre UV/IR
9	Bouton de commande de la sensibilité
10	Bouton de réglage du délai
11	Corps de casque
12	Réglage du haut de la pièce de tête

13	Bouton de réglage du serrage de la pièce de tête
14	Boutons de réglage de l'angle et de la distance de la pièce de tête
15	Lentille de couvercle avant
16	Compartiment à piles
17	Réglage du délai
18	Commande de sensibilité
19	Filtre à cartouche
20	ACL
21	Contrôle de soudage et meulage
22	Contrôle de teinte variable
23	Lentille intérieure du couvercle
24	Support de porte-filtre