

Wheel Covers


CARE & MAINTENANCE:

Your wheel covers will remain attractive on your car for years with minimal care. Notify your mechanic that he should treat your wheel covers with care when removing.


FITTING INSTRUCTIONS

1. Install the steel wire into the retaining clips on the reverse side of wheel rim. Ensuring the adjustable part is positioned between two plastic clips.

See Fig 1.

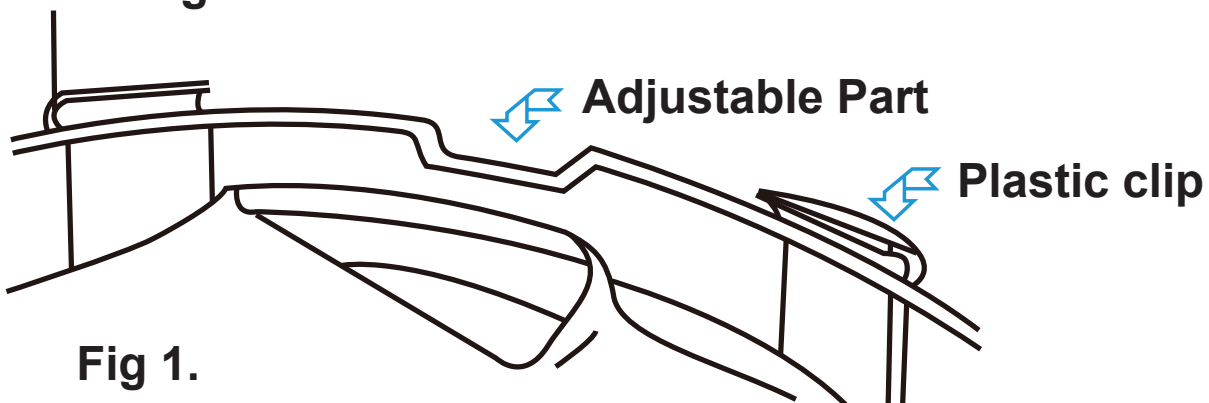

2. Instructions for the Adjustable Fixing Ring

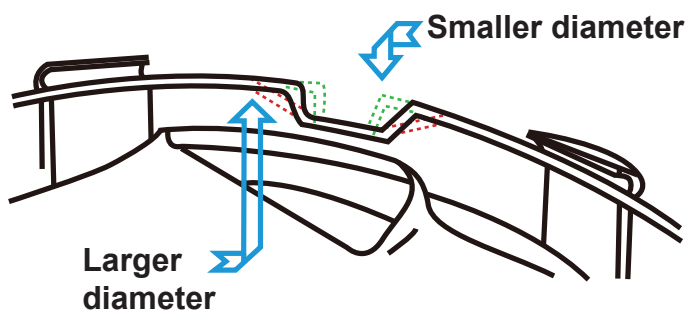

Fitment of split ring for fractional fitting View from inside the rim

Manual adjustment


Enjoliveurs

ENTRETIEN ET MAINTENANCE :


Vos enjoliveurs resteront beaux pendant des années avec un minimum d'entretien. Informez votre mécanicien qu'il doit manipuler vos enjoliveurs avec précaution lorsqu'il les démonte.

INSTRUCTIONS DE MONTAGE

1. Installez le fil d'acier dans les de retenue à l'arrière de la jante.
Assurez-vous que la partie réglable est positionnée entre deux en plastique.

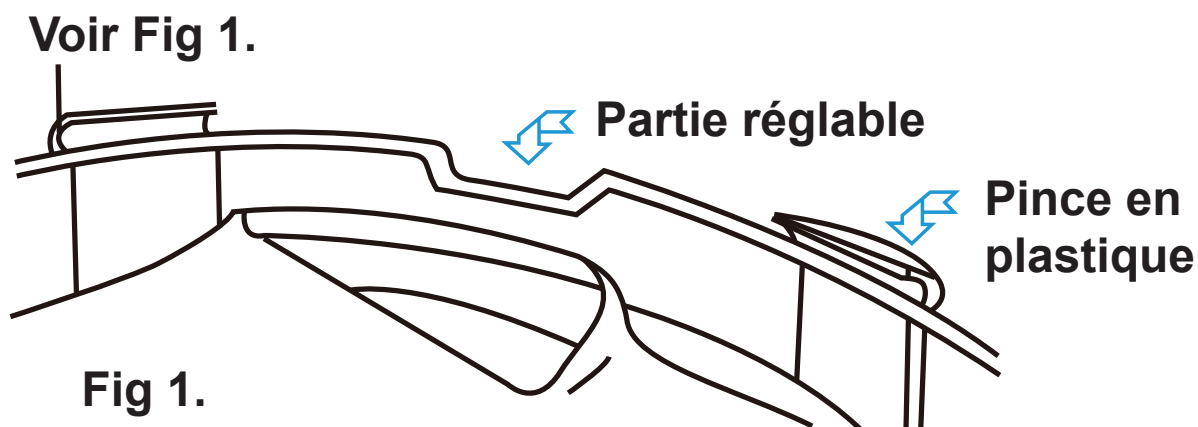

2. Instructions pour la bague de fixation réglable.

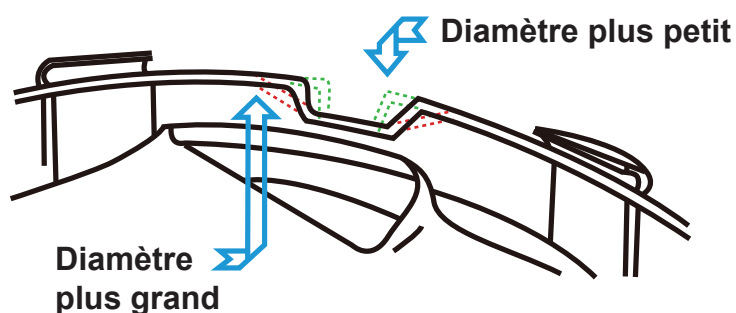

*Montage d'un anneau fendu pour un ajustement fractionnaire
Vue depuis l'intérieur de la jante*