

FIAMM Technologies, Inc.
1550 Leeson Ave.
Cadillac, MI 49601
Phone: (231) 775-1373
Fax: (231) 775-4402
E-mail: homsales@fiammtech.com

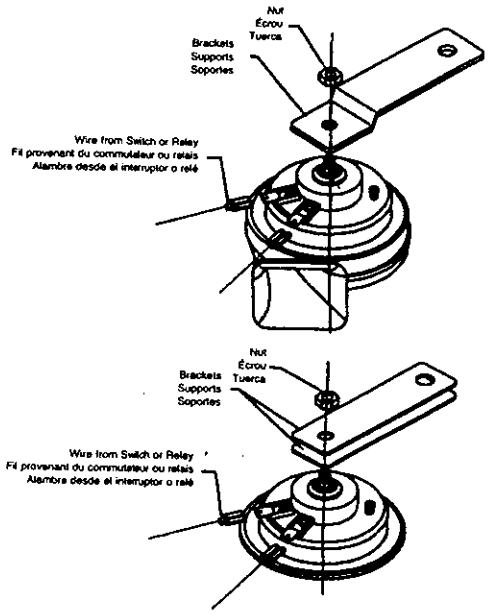

Two Wire Installation
Instruction #01224

Two wire installation instructions (For single wire instructions, see reverse side)


1. Cut the existing connector or connectors off of the wires running to the horn and install female blade connectors. (If your current harness already has female blade connectors, skip this step.)
2. Install the bracket using the 6mm nut provided onto the 6mm stud on top of the horn.
3. Connect the wires from the wire harness to the connectors on the horn. (The horn is not polarity conscious.)

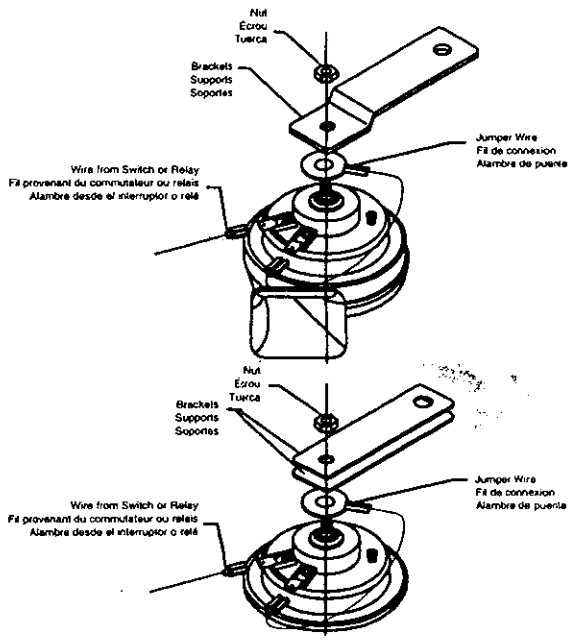

Single Wire Installation
Instruction #01224


Single wire installation instructions (For two wire instructions, see reverse side)

1. Cut the existing connector off of the wire running to the horn and install a female blade connector on the wire. (If your current harness already has a female blade connector, skip this step.)
2. Plug the jumper wire supplied in the kit into one of the blades on the connector on the horn and put the other end of the jumper wire on the 6mm stud on top of the horn.
3. Install the bracket using the 6mm nut provided onto the 6mm stud on top of the horn. Mount the horn and bracket assembly to a grounded portion of the vehicle.
4. Connect the wire from your vehicle to the other blade of the connector on the horn.

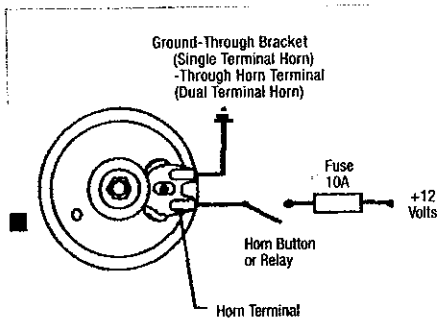


Whenever possible, hook-up the existing horn wire(s) to the new horn.

Caution: Do not adjust any screws or the horn will not operate.

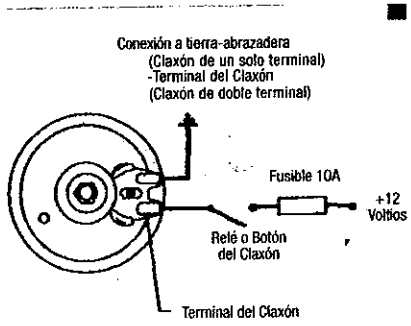

Siempre que sea possible, conecte los alambres existentes del claxón al nuevo claxón.

Cuidado: no arregle ninguno de los tornilos o el claxón no funcionara.

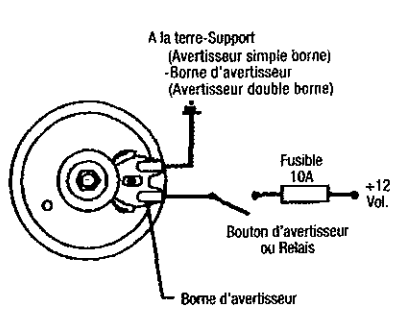

Lorsque c'est possible, brancher les fils d'avertisseur déjà présent, a l'avertisseurs neuf.

Attention: n'ajuster aucune vis, sinon, l'avertisseur ne fontionnera pas.