




Grabber Excavator Log/Rock

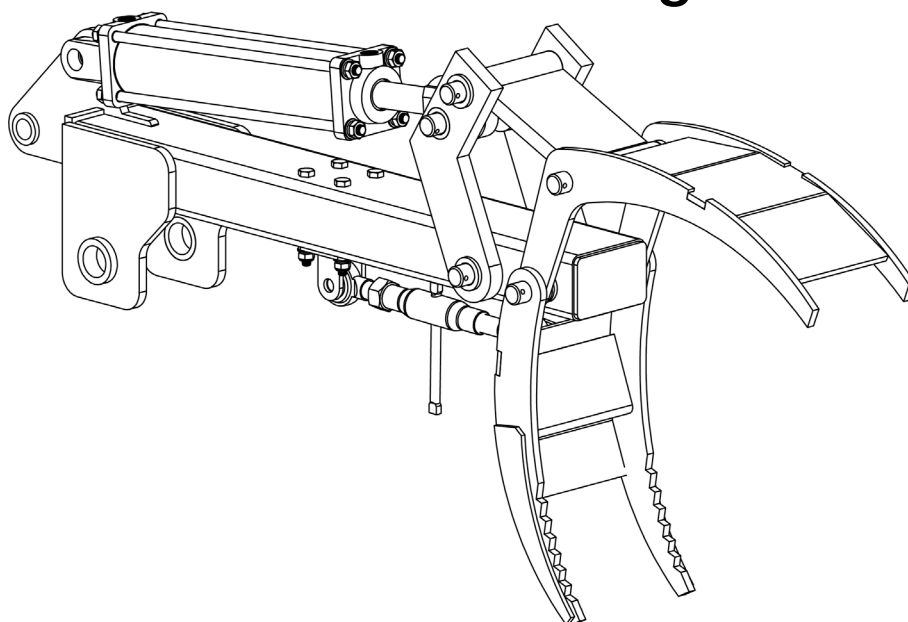

Step 1: Attach support base weldment (#6) to the short arm using hex bolt M10x110 (#10), flat washer Ø10 (#13), lock washer Ø10 (#14) and lock nut M10 (#12).

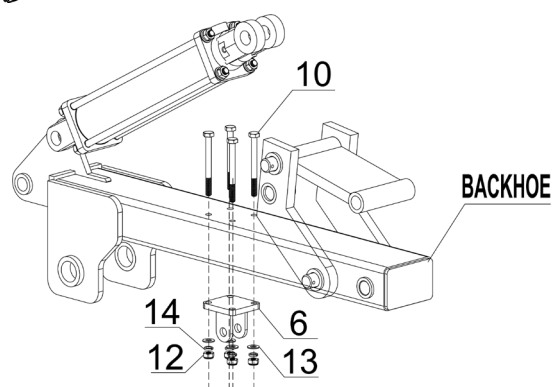


Step 2: Attach adjusting rod assembly (#7) to the support base weldment (#6) using hex bolt M16x70 (#9) and nylon lock nut M16 (#11).

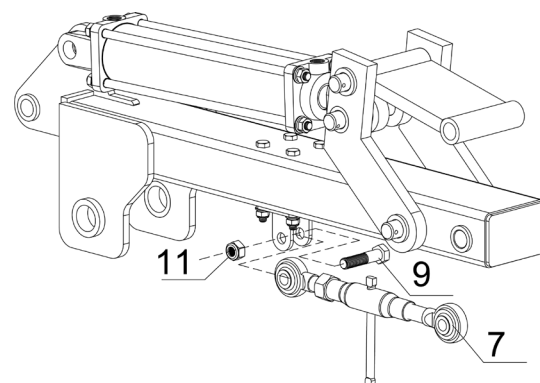


Step 3: Attach fixed wooden gripper (#5) and movable wooden gripper (#4) to the short arm using hinge pin A (#1) and cotter pin Ø4x50 (#8), place two spacers (#3) in the middle. Attach movable wooden gripper (#4) to the linkage using hinge pin B (#2) and cotter pin Ø4x50 (#8), place two spacers (#3) in the middle.


Attach the other side of the adjusting rod assembly (#7) to the connecting hole of fixed wooden gripper (#5) using hex bolt M16x70 (#9) and nylon lock nut M16 (#11).

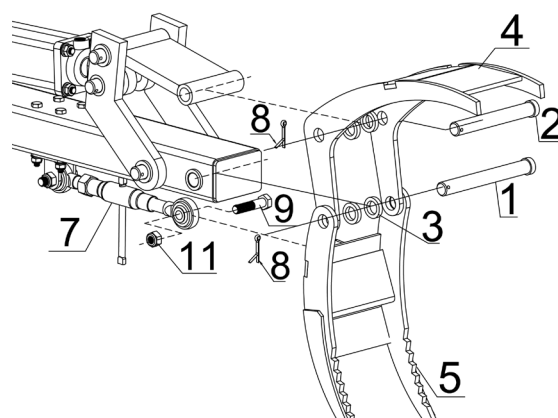


Step 4: Move the adjusting rod assembly (#7) left and right to adjust the distance between the front and rear of the fixed wooden gripper (#5).

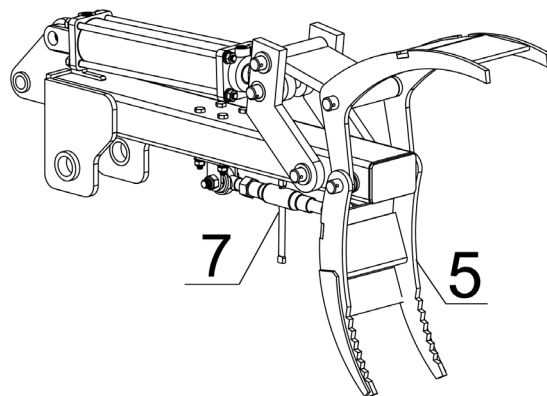

Note: If there is no hole on the short arm, please punch it according to the position and requirement shown in the below drawing. Install directly if the short arm has been punched.

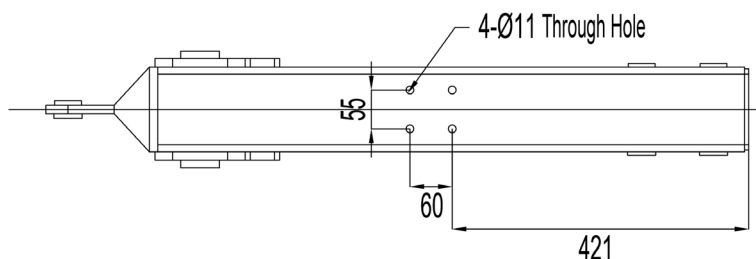


Parts Drawing

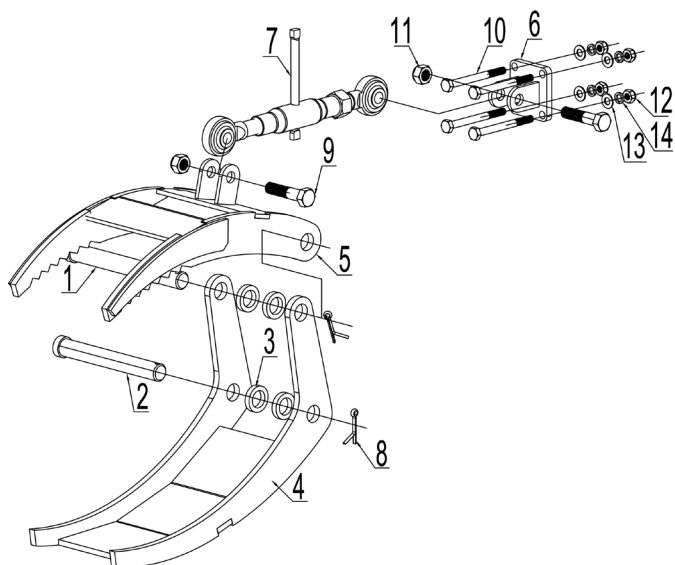


Parts List

Ref#	Drawing No.	Description	Qty
1	TS8110-00001-DX	Hinge Pin A	1
2	TS8110-00002-DX	Hinge Pin B	1
3	TS8110-00003-DX	Spacer	4
4	TS8110-01000	Movable Wooden Gripper	1
5	TS8110-02000	Fixed Wooden Gripper	1
6	TS8100-29000	Support Base Weldment	1
7	N630-50000	Adjusting Rod Assembly	1
8	9404-04050-DX	Cotter Pin Ø4x50	2
9	9101-16070-DX8.8	Hex Bolt M16x70	2
10	9101-10110-DX8.8	Hex Bolt M10x110	4
11	9206-16000-DX	Nylon Lock Nut M16	2
12	9206-10000-DX	Hex Lock Nut M10	4
13	9301-10000-DX	Flat Washer Ø10	4
14	9306-10000-DX	Lock Washer Ø10	4


Benne preneuse pour bûches / pierres

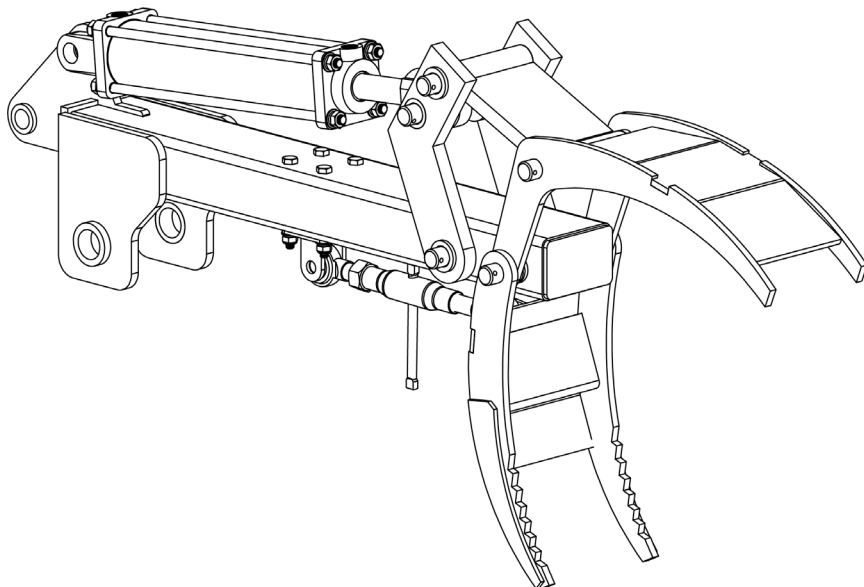

Étape 1 : Attacher la base d'appui (#6) au bras court en utilisant le boulon à tête hexagonale M10x110 (#10), la rondelle plate Ø10 (#13), la rondelle de blocage Ø10 (#14) et l'écrou de blocage M10 (#12).

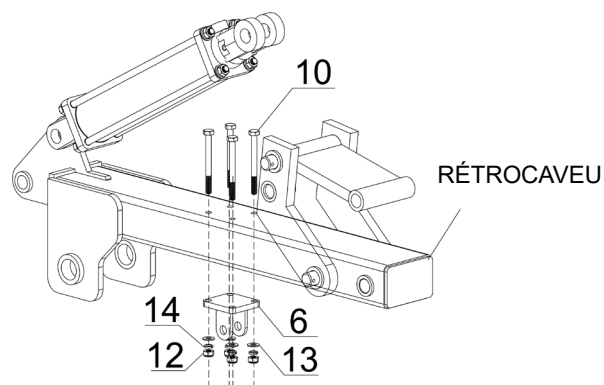


Étape 2 : Attacher l'ensemble de la tige de réglage (#7) à la base d'appui (#6) en utilisant le boulon à tête hexagonale M16x70 (#9) et l'écrou de blocage en nylon M16 (#11).

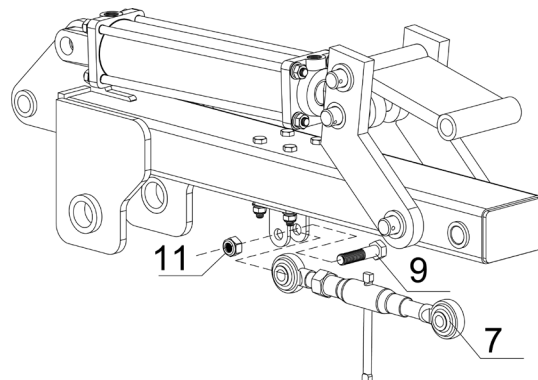


Étape 3 : Attacher la pince en bois fixe (#5) et la pince en bois mobile (#4) au bras court en utilisant la charnière A (#1) et la goupille fendue Ø4x50 (#8), et placer deux entretoises (#3) au milieu.

Attacher la pince en bois mobile (#4) à l'articulation en utilisant la charnière B (#2) et la goupille fendue Ø4x50 (#8), placer deux entretoises (#3) au milieu.

Attacher l'autre côté de l'ensemble de la tige de réglage (#7) au trou de connexion de la pince en bois fixe (#5) en utilisant le boulon à tête hexagonale M16x70 (#9) et l'écrou de blocage en nylon M16 (#11).

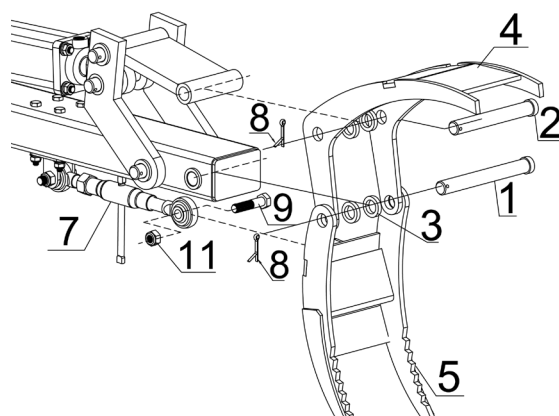

Étape 4 : Déplacer l'ensemble de la tige de réglage (#7) à gauche et à droite afin d'ajuster la distance entre l'avant et l'arrière de la pince en bois fixe (#5).

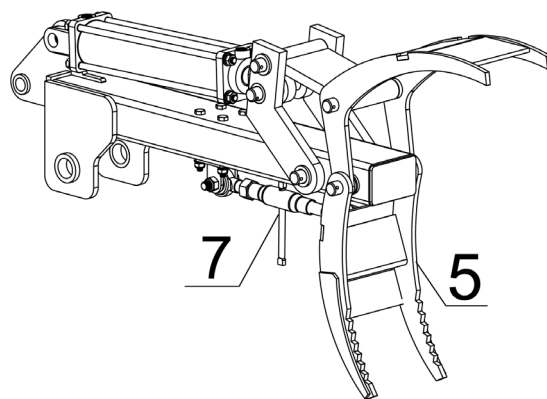

Note: S'il n'y a pas de trou sur le bras court, veuillez perforez le trou en fonction de la position et en conformité aux exigences indiquées dans la figure ci-dessous. S'il y a le trou sur le bras court, veuillez installer directement.


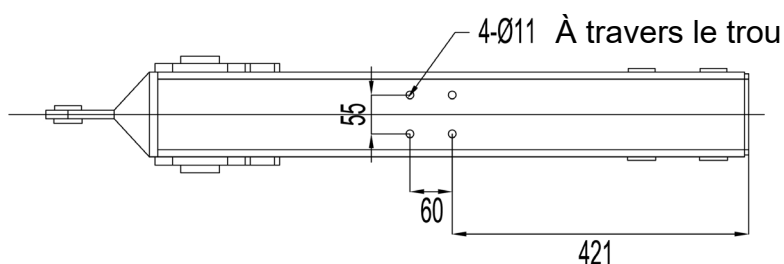


Figure des pièces

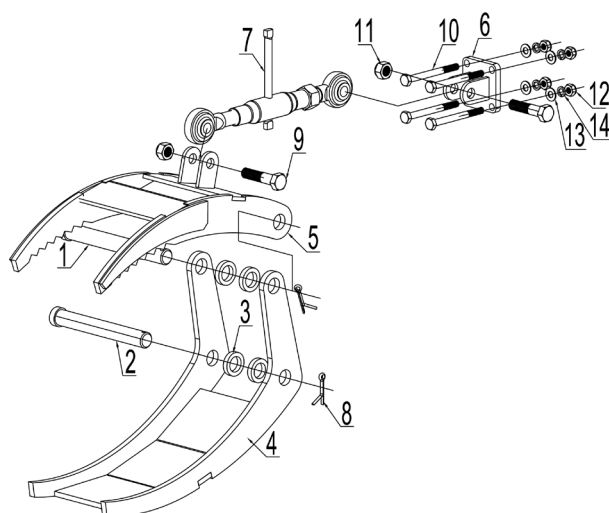

Liste des pièces

No	No de la figure	Description	Qté
1	TS8110-00001-DX	Charnière A	1
2	TS8110-00002-DX	Charnière B	1
3	TS8110-00003-DX	Entretoise	4
4	TS8110-01000	Pince en bois mobile	1
5	TS8110-02000	Pince en bois fixe	1
6	TS8100-29000	Base d'appui	1
7	N630-50000	Ensemble de la tige de réglage	1
8	9404-04050-DX	Goupille fendue Ø4x50	2
9	9101-16070-DX8.8	Boulon à tête hexagonale M16x70	2
10	9101-10110-DX8.8	Boulon à tête hexagonale M10x110	4
11	9206-16000-DX	Écrou de blocage en nylon M16	2
12	9206-10000-DX	Écrou de blocage à tête hexagonale M10	4
13	9301-10000-DX	Rondelle plate Ø10	4
14	9306-10000-DX	Rondelle de blocage Ø10	4