# VENT COVER


## INSTALLATION INSTRUCTIONS

**WARNING! CAREFULLY READ THE FOLLOWING INSTALLATION INFORMATION**

**NOTICE! If product components are missing or damaged, do not return to dealer, contact the manufacturer.**

## CONTENTS OF KIT

4 - 1/4-20 SS carriage bolts
4 - 1 /4 in. SS washers
4 - 1 /4 in. SS lock washers
4 - 1/4-20 SS hex nuts
4 - Aluminum brackets
4 - 8/32 SS nuts
4 - 8/32 SS screws
4 - #8 SS flat washers
4 - #8 SS lock washers

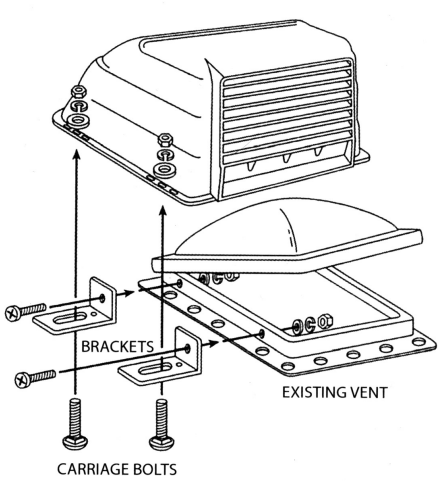


## TOOLS REQUIRED

- Power drill with 3/16 in. drill bit
- Phillips head screw driver
- Adjustable wrench
- Pencil

## ASSEMBLY

**STEP 1:**
Place the cover over the roof vent with the louver area facing the rear of the vehicle. After verifying that the cover is centered over the roof vent, use a pencil to trace the location of the slots in the cover mounting flange.

**STEP 2:**
Position a mounting bracket on your roof so that the slot in the bracket intersects one of the locations traced on the roof. For maximum strength, place the mounting brackets as close as possible to the outside corner of your existing roof vent frame.

**STEP 3:**
Mark the location of the screw hole in the bracket onto your roof vertical vent frame wall.
Drill through the roof vent frame using a 3/16 in. drill bit. Place one of the carriage bolts upward through the slot in the bracket fasten the bracket to the roof vent wall using the small screw provided. The small washer, lock washer and hex nut should be placed on the inside of the roof vent frame wall. Install2 brackets on each side of your roof vent as shown in the diagram.

**STEP4:**
Place the cover on the 4 upward pointing carriage bolts and fasten using the large flat washers, lock washers, and hex nuts provided. You may have to push the head of the carriage bolt up into the bracket slot to prevent the carriage bolt from turning during tightening of the nuts.

**STEP 5:**
A slight air gap between the cover base and the roof after installation is normal and permits condensation to escape. Do not apply caulking to this area!

# COUVERCLE DE VENTILATION


## INSTRUCTIONS D'INSTALLATION

**AVERTISSEMENT ! LISEZ ATTENTIVEMENT LES INFORMATIONS D'INSTALLATION SUIVANTES**

**NOTIFICATION ! Si des composants du produit sont manquants ou endommagés, ne retournez pas au revendeur, contactez le fabricant.**

## CONTENU DU KIT

4 - 1/4-20 boulons de carrosserie en acier inoxydable
4 - 1 /4 po Rondelles en acier inoxydable
4 - 1 /4 po Rondelles de blocage en acier inoxydable
4 - 1/4-20 écrous hexagonaux en acier inoxydable
4 - Supports en aluminium
4 - 8/32 écrous en acier inoxydable
4 - 8/32 vis inox
4 - #8 rondelles plates en acier inoxydable
4 - #8 rondelles de blocage en acier inoxydable

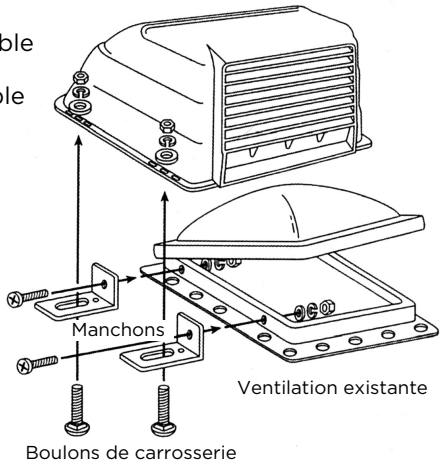


## OUTILS NÉCESSAIRES

- Perceuse électrique avec mèche de 3/16 po
- Tournevis cruciforme
- Clé à molette
- Crayon

## ASSEMBLAGE

**ÉTAPE 1:**
Placez le couvercle sur l'évent de toit avec la zone de la persienne face à l'arrière du véhicule. Après avoir vérifié que le couvercle est centré sur l'évent de toit, utilisez un crayon pour tracer l'emplacement des fentes dans la bride de comptage.

**ÉTAPE 2:**
Positionnez un support de montage sur votre toit de manière à ce que la fente du support croise l'un des emplacements tracés sur le toit. Pour une résistance maximale, placez les supports de montage aussi près que possible du coin extérieur de votre cadre de ventilation de toit existant.

**ÉTAPE 3:**
Marquez l'emplacement du trou de vis dans le support sur le mur du cadre de ventilation vertical de votre toit. Percez à travers le cadre de l'évent de toit à l'aide d'un foret de 3/16". Placez l'un des boulons de carrosserie vers le haut à travers la fente du support, fixez le support au mur de l'évent de toit à l'aide de la petite vis fournie. La petite rondelle, la rondelle de blocage et la clé hexagonale L'écrou doit être placé à l'intérieur du mur du cadre de l'évent de toit. Installez 2 supports de chaque côté de votre évent de toit, comme indiqué sur le schéma.

**ÉTAPE 4:**
Placez le couvercle sur les 4 boulons de carrosserie pointant vers le haut et fixez-le à l'aide des grandes rondelles plates, des rondelles de blocage et des écrous hexagonaux fournis. Vous devrez peut-être pousser la tête du boulon de carrosserie vers le haut dans la fente du support pour empêcher le boulon de carrosserie de tourner pendant le serrage des écrous.

**ÉTAPE 5:**
Un léger espace d'air entre la base du couvercle et le toit après l'installation est normal et permet à la condensation de s'échapper. N'appliquez pas de calfeutrage sur cette zone!